

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B)/NMB-3(B)

Questions or Comments

For questions or comments regarding this or other KIDdesigns products, please call our toll-free number: 1-800-777-5206

Please also visit our website: www.kiddesigns.com

Maintenance

- Clean the casing with a soft cloth moistened only with mild soap and water. Stronger cleaning agents may damage the surface of the case.
- If the toy is not to be used for a prolonged period, remove the batteries to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean it thoroughly and replace the batteries.

Limited One Year Warranty

KIDdesigns warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, KIDdesigns will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please call Customer Service at 1-800-777-5206 to obtain a Return Authorization Number and shipping instructions.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will KIDdesigns or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your KIDdesigns product.

 
© 2015 KIDdesigns, Inc.
Questions? Visit www.kiddesigns.com
or call 1-800-777-5206
1299 Main Street Rahway NJ 07065

© Disney
www.imagicademy.com

Disney
IMAGICADEMY

MODEL: AC-930

ROCKET BUILDER

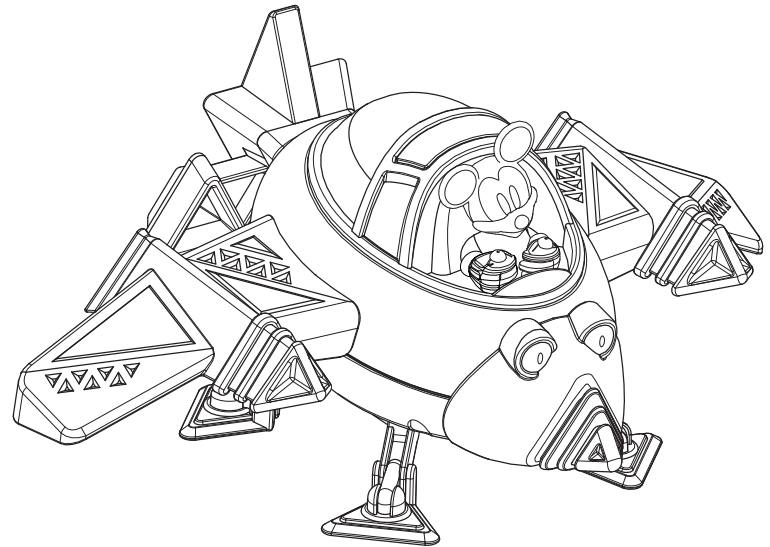

Important Message to Consumers

 
Thank you for purchasing one of our many top-quality electronic products. Please take a moment to read through these instructions to help you understand the safe and proper way to use this product to extend its usability. Keep these instructions for future reference as they contain important information.

Installing/Replacing the Batteries

ATTENTION: Batteries should only be installed by an adult.

This unit comes with 3 x AAA batteries already installed. These are for in-store demonstration purposes only and should be replaced when you get the product home.


- 1 Use a Philips screwdriver to open the battery compartment door.
- 2 Install 3 "AAA" size batteries into the compartment, making sure that the + and - polarities match the diagram printed inside.
- 3 Close the battery compartment door and tighten the battery door screw. Don't over tighten.

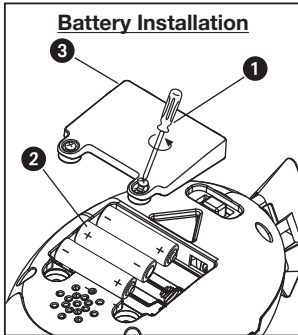

WARNING : DO NOT THROW BATTERIES AWAY WITH HOUSEHOLD TRASH. PLEASE CONSULT LOCAL REGULATIONS FOR PROPER BATTERY DISPOSAL.


For the Best Possible Performance

 - Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from product.
- Recharge rechargeable batteries under adult supervision.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Do not dispose of batteries in the household trash or fire.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.

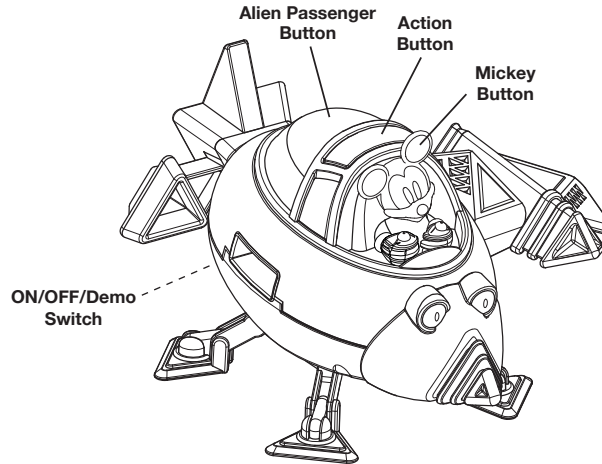

Experiment with shapes, colors, and counting with this 21 piece Rocket Builder set! The set comes with 4 sets of wings, landing gear, boosters, and nose cones that you can mix and match to create over 1,000 different unique designs! Fun sound effects activate as you add parts and customize your very own rocket!

 
Wings

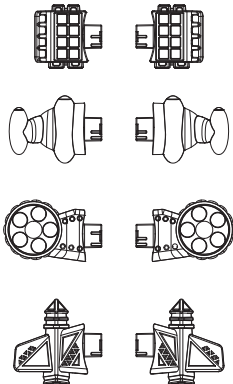

Boosters



 Landing Gear




Nose Cones



Note: In addition to the sound effects, you may hear ultra-sonic 'chirps' as you add pieces to the rocket. This is the toy communicating with the app and does not affect the operation of the rocket.

Removing Plastic Blisters

 This product ships with three (3) plastic blisters attached to prevent the toy from powering on inside the packaging. Please remove and discard the blisters before use.

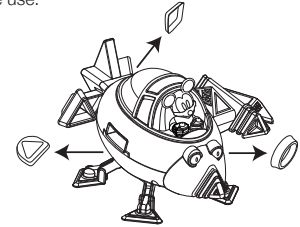

ON/OFF/Demo Switch

Slide the **ON/OFF/Demo Switch** to the **ON** position before you start to build your rocket! When not in use, be sure to slide the switch to the **OFF** position to conserve battery life.

Note: Demo mode is for use during in-store demonstrations only.

Using the Rocket

Let Mickey guide you on your mission as you build your rocket using the included wings, landing gear, boosters, and nose cones. Press the following buttons at any time during your space mission:

Action Button: Press the Action Button to activate speech and sound effects!

Alien Passenger Button: Press the Alien Passenger Button to pick up aliens along the way!

Mickey Button: Press on Mickey's head to hear messages from him!

Pretend to fly your rocket through the air - the engine sound effects are motion-activated!

Connecting The Imagicademy App

Enhance your experience by using the Imagicademy App! Using your iOS device, visit the official site, www.imagicademy.com to download the app. Once the app is installed on your device, make sure the Rocket Builder is set to the **ON** position. Follow the prompts on the app for even more interactive fun!

- Fly your rocket in different virtual environments.
- Save your custom rocket for virtual missions and races.
- Modify your rocket 'on the fly' to solve challenges.