

Getting Started

Installing/Replacing the Batteries

This unit requires 3 AA batteries (not included)

Note: Batteries should always be installed by an adult.

When the Low Battery icon appears on the lower right of the display, it's time to replace the batteries.

- Use a Phillips screwdriver to open the battery compartment door located on the back of the unit.
- Insert 3 AA batteries into the clock with + and - terminals as indicated in the compartment.
- Replace the compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten the screw.

For the Best Possible Performance

- Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from product.
- Recharge rechargeable batteries under adult supervision.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Do not dispose of batteries in the household trash or fire.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.

Demo Mode

This alarm clock is equipped with a 'Demo' mode for in-store demonstration purposes. For use at home, find the **Alarm ON/Alarm OFF/DEMO** switch on the back of the unit and slide the switch to either **Alarm On** or **Alarm Off**.

SFX Button

Press the **SFX Button** at any time to listen to the built-in message!

Setting the Time

- Press and hold the **Time Set Button** until the clock display begins to flash.
- Scroll to your desired time using the **Forward and Reverse Buttons**. Make sure to set the correct AM/PM time. The PM indicator appears at the bottom left of the display; there is no AM indicator.
- Once you have selected a time, press the **Time Set Button** again.

Setting & Using the Alarm

- Find the **Alarm ON/Alarm OFF/DEMO** switch on the back of the unit and slide it to 'ON'. The alarm indicator will appear on the upper left of the display.
- Press and hold the **Alarm Button** until the clock display and alarm indicator begin to flash.
- Scroll to your desired alarm time using the **Forward and Reverse Buttons**. Make sure to set the correct AM/PM alarm time. The PM indicator appears at the bottom left of the display; there is no AM indicator.
- Once you have selected a time, press the **Alarm Button** again.
- The alarm sounds for 15 minutes. When the alarm is sounding, press the **Alarm Button** to reset the alarm to come on the next day at the same time. To disarm the alarm, slide the **Alarm ON/Alarm OFF/DEMO** on the back of the unit to 'OFF'. The alarm indicator will vanish from the display.

Snooze/Night Light Button

Alarm/Snooze Function:

When the alarm is sounding, press the **Snooze/Night Light Button** to activate a 7 minute snooze cycle before the alarm sounds again. Snooze can be pressed several times during the 1 hour alarm cycle.

Night Light Function:

 
The Night Light can be activated before you go to sleep. When the alarm is **not** sounding (or the snooze feature is inactive) press the **Snooze/Night Light Button** to cycle through 5, 10, and 15 minute or OFF night light periods. Select the desired time and the unit will turn off the light automatically. Selecting OFF will disable the Night Light function.

Troubleshooting

If the clock does not work, this may indicate that the batteries are weak. Insert 3 new AA batteries into the unit.

If problems persist, DO NOT ATTEMPT TO REPAIR THE UNIT. See the Warranty for factory services.

Alarm ON/OFF/DEMO Switch /
Interruptor Activar alarma/Desactivar alarma/DEMO /
Commutateur activé / désactivé l'alarme / Démo



DISPLAY / PANTALLA / ECRAN

Alarm Indicator / Indicador de la Alarma /
Indicateur d'alarme



PM Indicator /
Indicador PM /
Indicateur PM

Low Battery Indicator /
Indicador Nivel de pila bajo /
Indicateur de niveau de pile bas

Alarm ON/OFF/DEMO Switch /
Interruptor Activar alarma/
Desactivar alarma/DEMO /
Commutateur activé /
désactivé l'alarme / Démo



SFX Button /
Botón SFX /
Touche SFX

Forward Button /
Botones de avance /
Boutons Avance

Time Set Button /
Botón para configurar la Hora /
Touche Régler l'heure

Reverse Button / Retroso / Retour

Alarm Button / Botón para configurar la Alarma /
Touche Régler l'alarme

Snooze/Night Light Button /
Botón para repetir la Alarma/activar
Luz Luminiscente /
Touche Rappel d'alarme/Veilouse

Questions or Comments

- For questions or comments regarding this or other KIDdesigns products, please call our toll-free number: 1-888-TOP-TOYS. Also visit our website: www.kiddesigns.com

If problems persist, please do not attempt to repair unit; see warranty for factory service.

Maintenance

It is important to keep the alarm clock as dry and clean as possible. You may clean the cabinet with a cloth or sponge moistened with mild soap and water. Do not attempt to use strong cleansers or solvents, as they may cause damage.

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B)/NMB-3(B)

Limited One-Year Warranty

KIDdesigns warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, KIDdesigns will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service. If service is required please call Customer Service at 1-888-TOP-TOYS (1-888-867-8697) to obtain a Return Authorization and the address of the Factory Service Center.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will KIDdesigns or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgment and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your KIDdesigns product.

© 2015 KIDdesigns, Inc. All Rights Reserved
Questions? Visit www.kiddesigns.com
or call 1-888-TOP-TOYS



Distributed by KIDdesigns, Inc. Rahway, NJ 07065-5624
eKids is a wholly owned subsidiary of KidDesigns, Inc.
1299 Main Street Rahway NJ 07065



Model/Modelo/Modèle: AV-346.2

NIGHT GLOW ALARM CLOCK/
RELOJ DESPERTADOR LUMINISCENTE/
RÉVEIL À LUMINESCENCE NOCTURNE



Important Message to Customers

Thank you for purchasing one of MARVEL's many top-quality electronic products. Please take a moment to read through these instructions to help you understand the safe and proper way to use this toy to extend its usability. **Keep these instructions for future reference as they contain important information.**

Mensaje importante para los clientes

Gracias por comprar uno de los productos electrónicos de calidad superior MARVEL. Por favor, tómese un momento para leer estas instrucciones que le ayudarán a entender la manera segura y apropiada de usar este juguete para extender su duración. **Conserve estas instrucciones para consultas futuras, puesto que contienen información importante.**

Message important aux clients

Merci pour votre achat d'un des nombreux produits de qualité MARVEL. Nous vous conseillons de prendre le temps nécessaire pour lire la présente notice afin de comprendre comment utiliser ce jouet et bénéficier de toutes ses fonctionnalités en toute sécurité. **Garde estas instrucciones para futura referencia ya que estas contienen información importante.**

