



 
# creativity studio



## DCS-18 Quick Start Guide

Visit our website for additional help  
[www.eKids.com](http://www.eKids.com)

# Stylus Overview

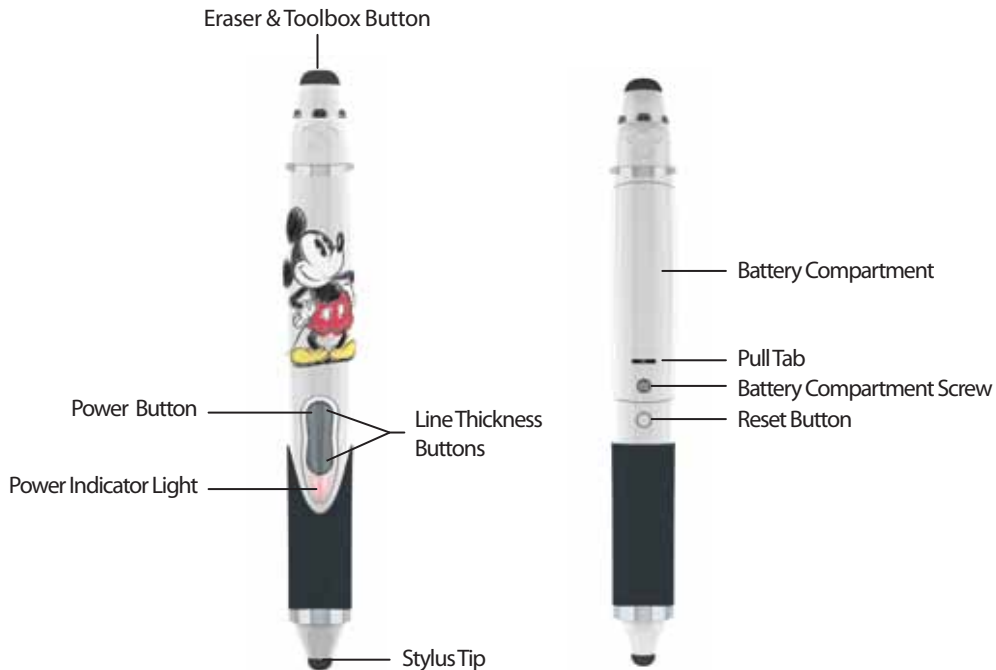

## What's in the Box



Start Guide



Stylus



Carrying Case



App Redemption Card

# Redeem your App



- 1 Locate your unique Disney Creative Studio APP REDEMPTION CARD. Follow instructions on the back to download the app for free. Once downloaded, launch the app.



- 2 To enable the battery, remove the battery pull tab from the back of the Stylus and discard. Keep pull tab away from small children. Press and hold the **POWER BUTTON** on the front of the Stylus for 2 seconds to turn it on. A red light will appear to show the Stylus is on.



# Explore the App



Tap on the Creativity Studio App icon to launch the app

There are lots of exciting ways to create art with your stylus. The fun comes alive on the canvas screen so explore the app to select your desired mode and let your creativity run wild!

## Draw Your Own

Go straight to the canvas screen!



## Activities

Fun creative modes such as Coloring, Tracing and Connect the Dots!

 
## Learn To Draw

Real Disney artists teach you how to draw characters!

## My Artwork

Your creations are automatically saved here!

# Studio Basics: the Canvas

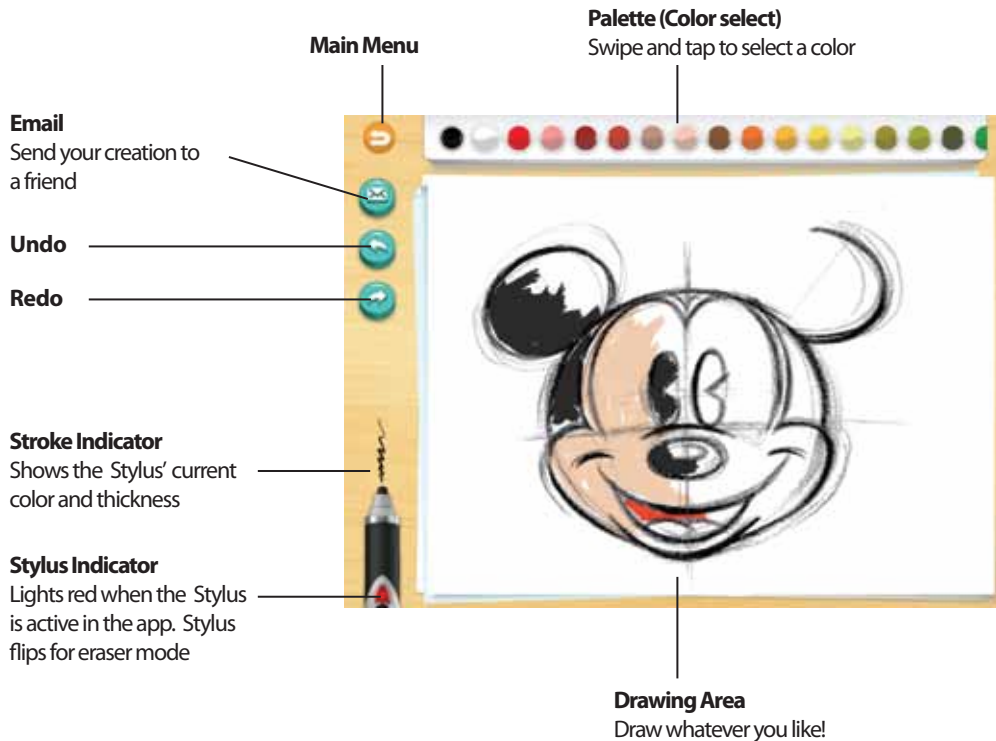

# Using the Stylus

Note: Stylus must be in close proximity to your iPad to work properly



## TOOLBOX

With the eraser facing up, press the **Toolbox Button/Eraser** on top of the Stylus as needed to toggle to different Stylus tools. Try them all!

## POWER BUTTON

- Press and hold for 2 seconds to turn Stylus ON or OFF

## LINE THICKNESS

- Press the **THICK Button** to make line/stroke **THICKER**.
- Press the **THIN Button** to make line/stroke **THINNER**.



## ERASE

Turn the Stylus **UPSIDE DOWN** to erase. Flip back over to begin drawing again.



## MAGICAL EFFECTS

- **SHAKE** the Stylus **UP** and **DOWN THREE (3)** or more times to put it in magic mode, adding special effects to your current stroke.
- **SHAKE AGAIN UP** and **DOWN THREE (3)** or more times to exit magic mode.

# Things to Know

## FOR BEST RESULTS

- DO NOT cover the holes by the eraser or you may block the signal the Stylus uses to communicate with the iPad.
- DO NOT cover the iPad's microphone at any time as doing so may block the signal the Stylus uses to communicate with the iPad.
- DO NOT use the Stylus and your iPad in very noisy environments or places with interference such as near TVs, etc. as some noises can interfere with the proper operation of the Stylus.
- DO NOT use more than one Stylus in the same room. The signals from the Stylus will not work properly if more than one Stylus is within range of the iPad.
- DO NOT press down hard on the iPad while using the Stylus.

## CARE AND MAINTENANCE

- Store the unit in the carrying case that comes with it
- It is important to keep the unit as dry and clean as possible.
- Do not allow dirt, sand, small particles, water or other liquids to enter the unit's casing.
- If the unit is to be left unused for an extended time period, such as a month or longer, have an adult remove the battery to extend its life and to prevent leaking or corrosion.

## Troubleshooting/FAQ

Problem	Possible Solutions
How do I save my artwork/ access saved artwork?	Your artwork is automatically saved to the My Artwork folder To view saved artwork, open the My Artwork folder and tap on the desired item to open it.
How do I email/share my artwork?	You can email your artwork after opening it and then tapping on the Email Button. An internet connection is required.
Stylus doesn't work	<ol style="list-style-type: none"><li>1. Replace or re-install the battery, checking that the polarity (+ and -) is correct.</li><li>2. Try resetting the Stylus. To do so, use a pen or similar to press in the Reset Button on the back of the Stylus while it is on.</li><li>3. Make sure the holes by the eraser are not covered.</li><li>4. Make sure the iPad's mic hole is not covered by a hand or case.</li><li>5. Be sure that there is not another Stylus being used in the same room or try another room if there is a TV or fan in use.</li></ol>
Stylus sounds like something's loose/broken when I shake it for magic mode	This is normal, you are hearing the motion switch. There is nothing wrong with the Stylus.
Stylus is not turning ON (or OFF)	Hold the Power Button down for 2 seconds. Note: the Stylus has a battery saving feature which automatically turns it off after 6 minutes of inactivity. The red Power Indicator Light shows when the Stylus is on.
The Tool Box/Eraser Button is not working	The Stylus must be ON and the eraser end must be facing UP for this button to work.
When I shake the Stylus I can't access the magic mode	The Stylus must be ON and then shaken UP and DOWN 3 or more times while the eraser end is facing UP .



## Replacing/installing the battery

 
The Stylus comes with 1 AA battery already installed.

### **Remove the pull tab to enable the battery.**

When a low battery notice appears on the app screen, it's time to replace the battery.

### **Note: Battery should always be installed by an adult.**

- A Use a small Phillips screwdriver to open the battery compartment door located on the back of the unit.
- B Insert 1 AA (LR6) battery into the Stylus with + and - terminals as indicated in the compartment. We strongly recommend alkaline batteries.
- C Replace the compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten the screw.

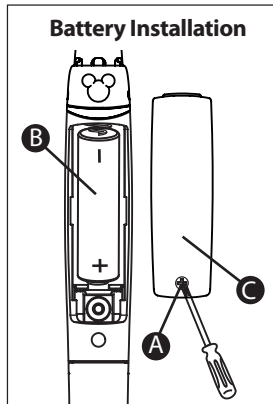

**WARNING: DO NOT DISPOSE OF BATTERIES IN HOUSEHOLD TRASH. CONSULT LOCAL REGULATIONS FOR PROPER BATTERY DISPOSAL.**

For the Best Possible Performance

- We recommend the use of alkaline batteries for longer life.
- Battery is to be inserted with correct polarity.
- Remove exhausted battery from the unit.
- Do not attempt to recharge non-rechargeable batteries.
- Remove the rechargeable battery from the unit before charging.
- The supply terminals are not to be short-circuited.
- Battery should be removed if the item will not be used for an extended period of time, such as a month or longer, to prevent battery leakage or damage.
- Rechargeable battery should only be charged under adult supervision.
- Only use a battery of the same or equivalent type as recommended.

© Disney Visit [disney.com](http://disney.com)  
Distributed by eKids, Inc. 1299 Main Street Rahway, NJ 07065-5024  
© 2012 eKids Inc. All rights reserved.  
iPad and the App Store are registered trademarks of Apple Inc.

**Visit our website for additional help: [www.eKids.com](http://www.eKids.com)**

Printed in China.

DCS-18091312-J (Eng)

