

## Questions or Comments

- For questions or comments regarding this or other KIDdesigns products, please call our toll-free number: **1-888-TOP-TOYS** Also visit our website: **www.kiddesigns.com**

**If problems persist, please do not attempt to repair unit; see warranty for factory service.**

## Limited One-Year Warranty

KIDdesigns warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one year from the date of original purchase.

Should service be required by reason of any defect or malfunction, it is best to first return this product and all parts thereof to the store where it was originally purchased. If you need to send the product for service during the warranty period, KIDdesigns will repair or, at its discretion, replace this product without charge (except for a \$6.00 charge for handling, packing, return UPS/postage and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of KIDdesigns, for the sum of \$6.00.
4. Send the unit prepaid to the Factory Service Center listed below.

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to one year, and KIDdesigns will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Send unit to:

Consumer Repair Department  
KIDdesigns, Inc.  
1330 Goodyear Dr. El Paso, TX 79936-6420

© Disney/Pixar  
Visit [disney.com/cars](http://disney.com/cars)

Distributed by KIDdesigns, Inc. Rahway, NJ 07065-5024  
eKids is a wholly owned subsidiary of KidDesigns, Inc.,  
1299 Main Street Rahway NJ 07065



Model CR-150

 
## SPEAKERS AND HEADPHONES



### Important Message to Customers

Thank you for purchasing one of Disney/Pixar's many top-quality electronic products. We would appreciate it if you take a few moments to read through these instructions. This will help you explain to the child the safe and proper way to use this product, and to help give it the long-lasting life that Disney/Pixar products are designed for.

## Controls and Indicators

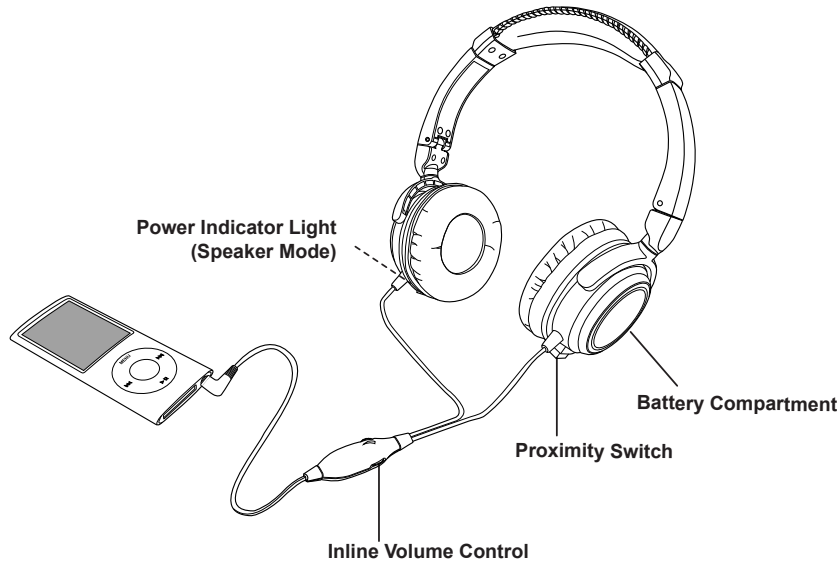


## Installing/Replacing Batteries for Speaker Mode Operation

The CR-150 uses 2 “AAA” batteries for speaker mode operation. If the sound becomes weak or distorted, it is time to replace the batteries.

1. Twist the top of the left headphone cup counterclockwise (left) to open the battery compartment cover.
2. Insert 2 “AAA” batteries as indicated.
  - We recommend the use of alkaline batteries for longer life.
3. Replace headphone cup cover (line up guidelines on cover and body of headphone cup) and turn clockwise (right)

### Batteries information

 - Do not mix old and new batteries.
- Do not mix alkaline, standard (carbonyl-zinc) or rechargeable (nickel-cadmium) batteries.

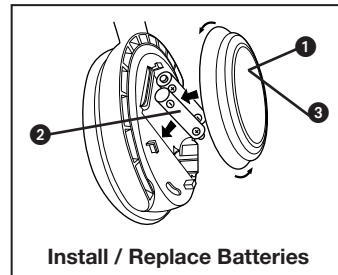

## Headphone Mode

In headphone mode, privately enjoy full rich sound in comfort with noise isolation padding.

1. Connect the plug at the end of the headphone cable to the headphone or audio out jack on your audio device. Make sure audio device is turned on.
2. Turn the volume knob to adjust the volume. You may also want to adjust the volume on your audio device for the best sound level.



**CAUTION:** Avoid using headphones near magnets, including magnetic jewelry such as earrings, bracelets or necklaces, as the magnetic speaker switch could be activated, resulting in an abrupt unwanted increase in volume.

## Speaker Mode

 
In speaker mode, a magnetic proximity switch activates the battery preamp to kick up the output for listening at room volume.



Step 1



Step 2

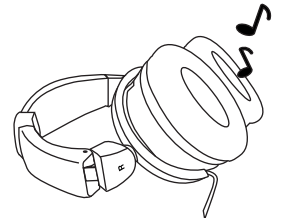

Step 3

1. Connect the plug at the end of the headphone cable to the headphone or audio out jack on your audio device. Make sure audio device is turned on.
2. Turn the headphone cups so they are facing up when on a flat surface.
3. Press the square switch on the bottom of one cup (near the headphone cable) into the square switch socket on the other. The red power LED will light up when the connection is complete.
4. Tune the volume knob to adjust the volume. You may also want to adjust the volume on your audio device for the best sound level.

**NOTE:** Separate phone cups/break the connection when not using as speakers to avoid draining the batteries.