

Troubleshooting

Make sure to unplug the AUX line-in cable if you are trying to operate the wheel in Challenge Mode or Free Play.

Your audio device should be connected to the AUX jack if you are trying to play music through the speaker or record a song. If the unit is experiencing a fuzzy or distorted sound, check the batteries. They are most likely weak and need to be replaced with 3 brand new "AA" batteries.

In the event of interrupted operation, use the extended wire of a paperclip or other thin tool to press in the Reset button located on the back of the unit.

Questions or Comments

For questions or comments regarding this or other eKids products, please call our toll-free number: **1-888-TOP-TOYS**. Please also visit our website: www.ekids.com

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B)/NMB-3(B)

Limited One Year Warranty

eKids warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service. If service is required, please call Customer Service at 1-888-TOP-TOYS (867-8697) to obtain a Return Authorization Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids product.

© 2017 eKids, LLC
Questions? Visit www.ekids.com
or call 1-888-TOP-TOYS
1299 Main Street Rahway NJ 07065

© Disney/Pixar
www.disney.com/cars



Model: CR-155

MP3 SMART WHEEL



 
Important Message to Customers

Thank you for purchasing one of our many top-quality electronic products. Please take a moment to read through these instructions to help you understand the safe and proper way to use this toy to extend its usability.

Keep these instructions for future reference as they contain important information.

Installing the Batteries

1. Using a Phillips screwdriver, open the battery compartment door located on the back of the unit.
2. Insert 3 new AA (R6) batteries in the battery compartment. Make sure batteries match the + and - as indicated in the battery compartment diagram.
3. Replace battery compartment door. Do not over-tighten screw.

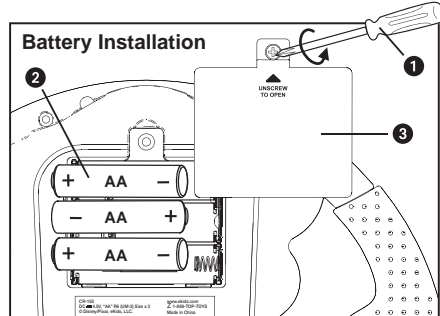


Battery Use Cautions and Tips for Safety & Best Performance


- Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from product.
- Recharge rechargeable batteries under adult supervision.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Do not dispose of batteries in the household trash or fire.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.

Volume Switch

 This unit comes equipped with a Volume Switch that is set to Demo mode for in-store demonstrations. When you are ready to play, slide the switch to High or Low.

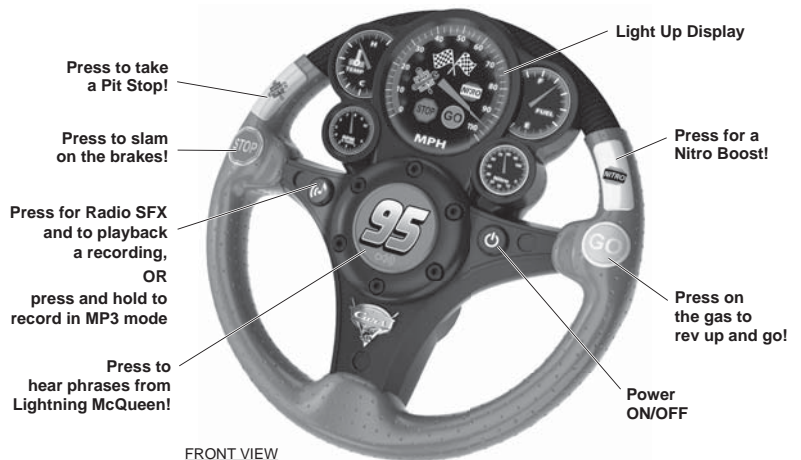

FRONT VIEW

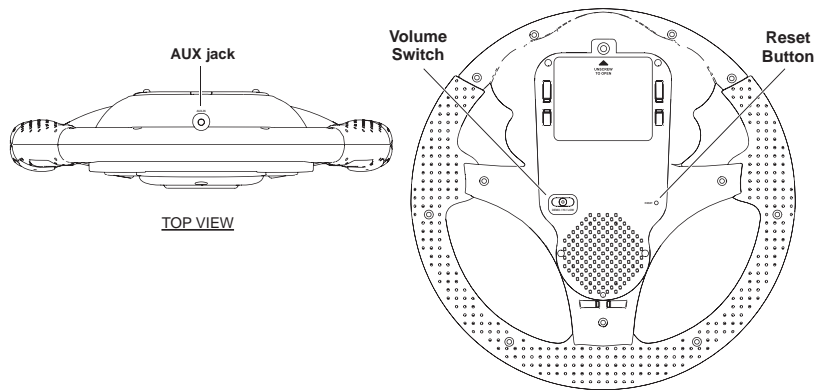 

TOP VIEW

BACK VIEW

Free Play Mode

In Free Play Mode, you can press any button or turn the wheel to activate sound effects, feel the wheel vibrate, and see the LED's light up on the display!

Challenge Mode

1. Press the **Power ON/OFF Button** and watch the **Light-Up Display** call out driving directions! When an icon lights up on the display, press the corresponding button on the steering wheel to complete your challenge. For example, when the Nitro icon lights up on the display, press the **Nitro Button** to boost your speed!
2. Each time you complete a challenge, the steering wheel will vibrate and the display will light up. If you fail a challenge, a new challenge will automatically follow. Once you complete three challenges in a row, you win!

MP3 Mode

Use the included AUX Line-in Cable to connect an audio device such as a smartphone, MP3 player, CD player, etc., to the steering wheel. Whenever the cable is connected to the steering wheel, it will automatically be in MP3 mode. (Note: Unplug the cable to return to Free Play or Challenge Mode.)

1. Connect one end of the included audio cable to the headphone jack of an audio device such as a smartphone or MP3 player, then connect the other end to the AUX jack on the steering wheel.
 2. Put your audio device in play mode. Now you can play your favorite songs through the speaker on the steering wheel!
- Note:** Challenge Mode and Free Play will not operate when the cable is connected. Disconnect your device and unplug the cable to resume regular play. To listen to music while you play, record a song using the **Radio SFX Button** (see instructions below).

Recording From Your Audio Device

1. Make sure your audio device is connected to the steering wheel via the included audio cable.
 2. Turn on your audio device and put it in Play mode.
 3. After you have selected a song, press and hold the **Radio SFX Button** until the light-up display on the steering wheel starts to blink. The steering wheel can now record up to 2 minutes of music.
 4. Press the Radio SFX button again to stop recording. Press the button once more to playback your recording!
 5. When you are finished recording, disconnect your device and unplug the cable to continue in Challenge Mode or Free Play.
- Note:** New recordings overwrite previously stored recordings. To erase a recording, press and hold the **Radio SFX Button** for 5 seconds while in MP3 Mode.