

Troubleshooting

- If you experience improper operation, try pressing the Reset button located on the back of the unit.
- If the unit does not work at all, check the batteries. They are most likely weak and need to be replaced with 3 brand new "AA" batteries. If the unit still does not work after changing the batteries, then take them out and make sure you have installed them properly.
- If there is a distorted or fuzzy sound the batteries are weak. Once again, replace them with new alkaline batteries.
- If improper operation continues, momentarily remove then install batteries, while making sure that you have installed them correctly.
- If the trouble persists, DO NOT ATTEMPT TO REPAIR THE UNIT. See warranty for factory services.

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

"If You Can Dream"
Words and Music by Robbie Buchanan and Jay Landers
© 2004 Walt Disney Music Company (ASCAP)
All Rights Reserved.

"A Dream Is A Wish Your Heart Makes"
Words by Al Hoffman and Jerry Livingston and Music by Al Hoffman and Mack David © 1948 Walt Disney Music Company (ASCAP) Copyright Renewed. All Rights Reserved.

"Part Of Your World"
Music by Alan Menken and Words by Howard Ashman
© 1988 Wonderland Music Company, Inc. (BMI)/Walt Disney Music Company (ASCAP) All Rights Reserved.

Maintenance

It is important to keep the unit as dry and clean as possible. You may clean the cabinet with a cloth or sponge moistened with mild soap and water. Do not attempt to use strong cleansers or solvents, as they may cause damage.

Questions or Comments

For questions or comments regarding this or other KIDdesigns products, please call our toll-free number: **1-888-TOP-TOYS**. Please also visit our website: **www.kiddesigns.com**.

Limited 90-Day Warranty Information

KIDdesigns warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original -purchase.

Should service be required by reason of any defect or malfunction, it is best to first return this product and all parts thereof to the store where it was originally purchased. If you need to send the product for service during the warranty period, KIDdesigns will repair or, at its discretion, replace this product without charge (except for a \$6.00 charge for handling, packing, return UPS/postage and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of KIDdesigns, for the sum of \$6.00.
4. Send the unit prepaid to the Factory Service Center listed below.

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and KIDdesigns will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Send unit to:

Consumer Repair Department
KIDdesigns, Inc. 1330 Goodyear Dr.
El Paso, TX 79936-6420

©Disney Visit the Disney website at DisneyPrincess.com
Manufactured and Distributed by KIDdesigns, Inc.
Rahway, NJ 07065-5024



Model DC-160

Enchanting Sing-Along
MP3 Boombox



3+

Important Message to Consumers

Thank you for purchasing one of Disney/Princess's top-quality electronic products. We would appreciate it if you take a few moments to read through these instructions. This will help you understand the safe and proper way to use this product, and to help give it the long-lasting life that Disney/Princess products are designed for.

Keep these instructions for future reference as they contain important information.

Installing the Batteries

ATTENTION: Batteries should only be installed by an adult.

The unit comes with batteries already installed. These batteries are meant for in-store demonstration use only, and should be replaced with fresh batteries when you get the toy home. To replace the batteries at home:

1. Using a Phillips screwdriver, open the battery compartment door located on the back of the unit.
2. Insert 3 new AA (R6) batteries in the battery compartment. Make sure batteries match the + and - as indicated in the battery compartment diagram.
3. Replace battery compartment door. Do not overtighten screw.

WARNING DO NOT DISPOSE OF BATTERIES WITH HOUSEHOLD TRASH. PLEASE CONSULT LOCAL REGULATIONS FOR PROPER BATTERY DISPOSAL.

For the Best Possible Performance

- We recommend the use of alkaline batteries for longer life.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Batteries are to be inserted with correct polarity.
- Remove exhausted batteries from the unit.
- Do not attempt to recharge non-rechargeable batteries.
- Remove the rechargeable batteries from the unit before charging.
- The supply terminals are not to be short-circuited.
- Batteries should be removed if the item will not be used for an extended period of time, such as a month or longer, to prevent battery leakage or damage.
- Rechargeable batteries should only be charged under adult supervision.
- Only batteries of the same or equivalent type recommended are to be used.

 
Remove Demo Tab

The Boombox has a demo tab for in-store demonstration purposes. Make sure to remove this tab. To do so, gently pull on tab. Dispose of tab properly.


NOTE: Make sure to adjust the Volume Dial after removing the demo tab.

Volume Adjust


Turn the **Volume Dial** to adjust the volume on the unit.

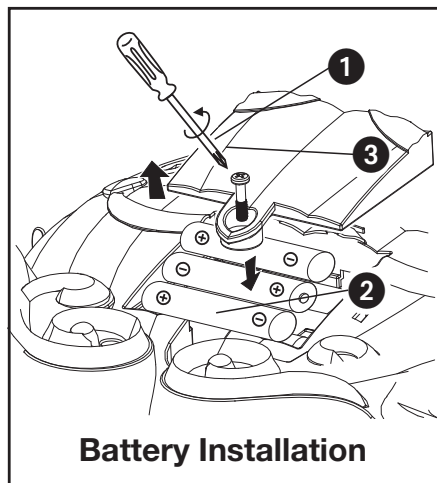

Battery Installation

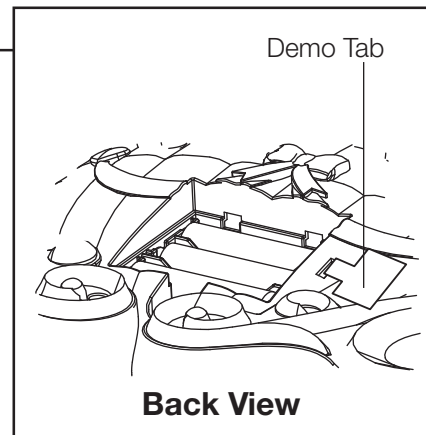 

Back View

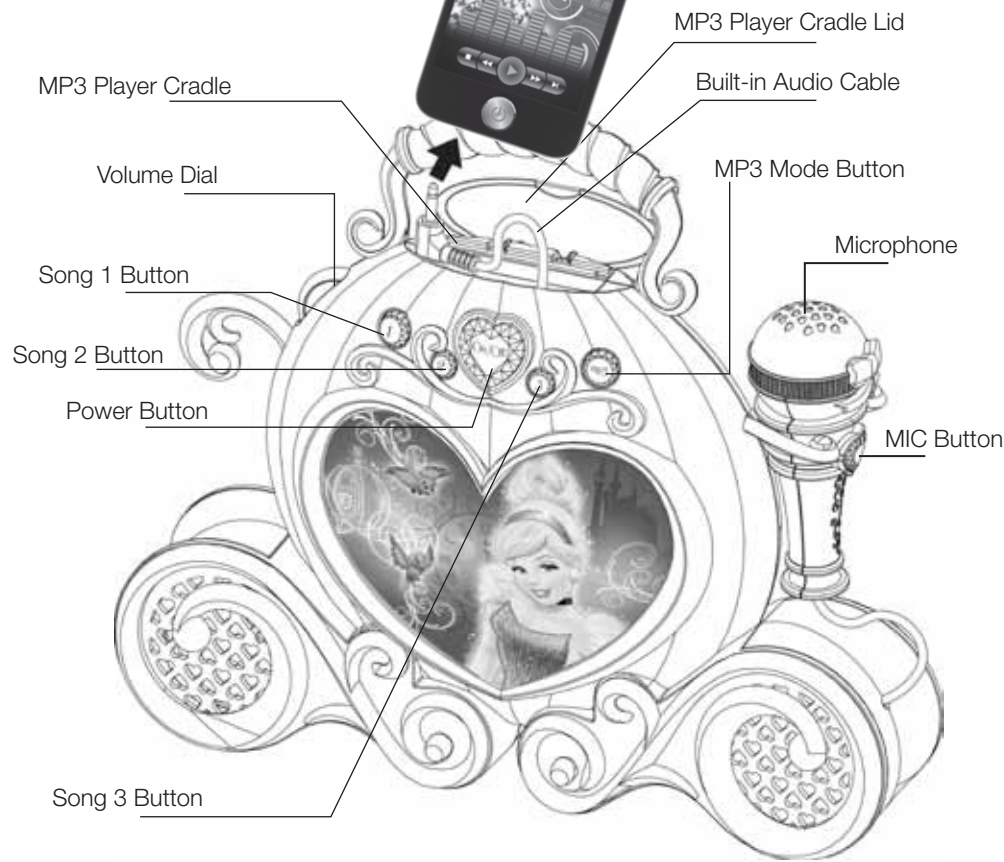 

Using the Microphone

Pull out on the mic to release it from the holder on the side of the unit. To return the mic, place it back in the holder.

Be relaxed and ready to sing! Press the button on the microphone while singing or speaking. Release button to mute microphone.

For best sound, try singing with the mic 1-3 inches from your mouth.

TIP: To avoid feedback (unpleasant squealing or howling sound), do not point the mic towards the speakers.

Power On/Off

1. When the unit is off, press the **Power Button** to turn it on. You will hear a greeting.
2. You can turn off the unit at any time by pressing the **Power Button**. You will hear a farewell message.

Song Selection and Sing-Along

1. Press a song button (**Song 1**, **Song 2** or **Song 3**) to play the song you wish to sing along with. You will hear a chime, then the song will play.
2. Hold the **MIC Button** as you sing along. Lights will pulse along to the music as you enchant the whole palace!

Using the MP3 Audio Cable

This unit includes an MP3 player cradle with a built-in Audio Cable inside to listen to your own music through your MP3 player. Lift the lid under the handle. Use the included Audio Cable (located in the MP3 player cradle) to connect an audio device such as an MP3 player, CD player, tape deck, etc., to the Boombox.

1. Lift the lid of the MP3 Player Cradle and place your MP3 player in the cradle.
2. Connect the included Audio Cable to the line out or headphone jack of your audio device. Press the **MP3 Button**.
3. Turn on your audio device and put it in play mode.
4. Sing along with your MP3 music using the **MIC Button** on the mic.
5. Adjust the volume as needed with the Volume Dial. You may need to adjust the volume on your audio device, too.
6. MP3 mode will automatically turn off in about 15 minutes to save power.
7. Press the **MP3 Button** to activate the mode again.
8. Remember to turn off your audio device when you are through playing with it.