

MODEL DP-070

# Sing-Along MP3 Princess Microphone

## Important Message to Consumers

Thank you for purchasing one of the Disney/Princess's many top-quality electronic products. We would appreciate it if you take a few moments to read through these instructions. This will help you explain the safe and proper way to use this toy, and to help give it the long-lasting life that Disney/Princess products are designed for.

**Keep these instructions for future reference as they contain important information**

## FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.


## Playing with the Sing-Along MP3 Princess Microphone

There are two ways to have musical fun with your Sing-Along MP3 Princess Microphone. You can sing along to the built-in song, or to any song on your MP3 player or other audio device by connecting it via the MP3 cable (see instructions below). Have a great show!



### Song Mode

- Slide the **Mode Switch** located on the side of the microphone to Song position  to enable song mode.
- Press the **Jewel Button**. The microphone will automatically start playing the built-in song and lights will pulse to the beat.  
Press the **Jewel Button** again to interrupt the song.
- Slide the **Mode Switch** to Off to turn the microphone off.

### MP3 Mode

- Slide the **Mode Switch** to MP3 position  to enable MP3 mode.
- Slide the MP3 compartment cover and remove cover.
- Connect included MP3 Audio Cable to the headphone or line out jack on your MP3 player or other audio device.
- Fit the MP3 Audio Cable into the cable slot on the bottom of the microphone and slide the MP3 compartment door closed.
- Turn on and play your MP3 player/audio device
- Press the **Jewel Button** to hear the music on your MP3 player/audio device. Adjust the volume on your audio device. Press the **Jewel Button** again to stop listening.
- Slide the **Mode Switch** to OFF to turn off the mic when you are done. Remember to turn off your MP3 player or other audio device, too.

There is a 5 minute timer that will automatically turn off MP3 playback. Press the **Jewel Button** again to resume MP3 playback.

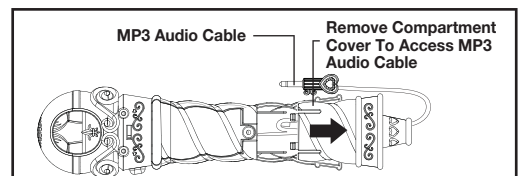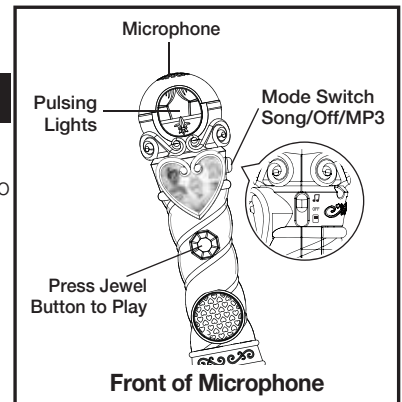


## Installing the Batteries

**ATTENTION:** Batteries should only be installed by an adult.

The unit comes with batteries already installed. These batteries are meant for in-store demonstration use only, and should be replaced with fresh batteries. To replace the batteries at home:

- 1 Use a Philips screwdriver to open the battery compartment door.
- 2 Install 2 "AAA" R03 (UM-4) size batteries into the compartment, making sure that the + and - polarities match the diagram printed inside.
- 3 Close the battery compartment door and tighten the battery door screw. Don't over tighten.

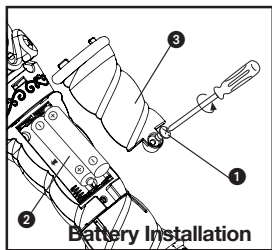

### For the Best Possible Performance

- We recommend the use of alkaline batteries for longer life.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with correct polarity.
- Remove exhausted batteries from the unit.
- Do not attempt to recharge non-rechargeable batteries.
- Remove rechargeable batteries from the unit before charging.
- The supply terminals are not to be short-circuited.
- Batteries should be removed if the item is not going to be needed for an extended period of time (approximately 30 days or more) to prevent leakage or damage to the unit.
- Rechargeable batteries are only to be recharged under adult supervision.

## Removing the Demo Tab

This unit has a demo tab for in-store demonstration purposes. Make sure to remove this tab (located on the back of the unit). To do so, gently pull on tab. Dispose of tab properly.

## Maintenance

It is important to keep the unit as dry and clean as possible. Clean the unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner or similar materials are not recommended, as they may damage the surface of the case.

Do not allow dirt, sand, small particles, water or other liquids to enter the toy's casing.

If the unit is to be left unused for an extended time period, such as a month or longer, have an adult remove the battery to extend its life and to prevent leaking or corrosion.

## Questions or Comments

☎ For questions or comments regarding this or other KIDdesigns products, please call our toll-free number: 1-888-TOP-TOYS.

Please also visit our website: [www.kiddesigns.com](http://www.kiddesigns.com)

## One Year Limited Warranty

KIDdesigns warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one year from the date of original purchase.

Should service be required by reason of any defect or malfunction, it is best to first return this product and all parts thereof to the store where it was originally purchased. If you need to send the product for service during the warranty period, KIDdesigns will repair or, at its discretion, replace this product without charge (except for a \$6.00 charge for handling, packing, return UPS/postage and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered. If service is still required:

1. Remove batteries (if applicable) and pack unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of KIDdesigns, for the sum of \$6.00.
4. Send the unit prepaid to the Factory Service Center listed below.

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the factory service center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to one year, and KIDdesigns will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Send unit to: *Consumer Repair Department*  
**KIDdesigns Inc.**  
1330 Goodyear Dr.  
El Paso, Texas 79936-6420  
© Disney  
Visit [disneyprincess.com](http://disneyprincess.com).

*Manufactured and Distributed by KIDdesigns, Inc.*

*Rahway, NJ 07065-5024*

*"Once Upon A Dream" Words and Music by Jack Lawrence and Sammy Fain*

© 1952 Walt Disney Music Company (ASCAP) Copyright Renewed. All Rights Reserved.