 


Using The Speaker

CHARGE BEFORE USE

 
TOP VIEW

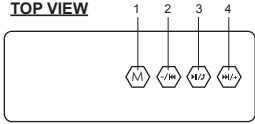

Top View Key:

1. Mode
2. Volume Down/Track Reverse
3. Play/Pause/Speakerphone
4. Volume Up/Track Forward


BACK VIEW

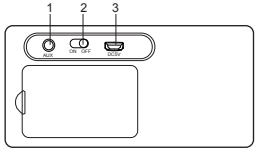

Back View Key:


1. AUX Jack
2. On/Off Switch
3. Micro USB Charging Port

 FRONT VIEW

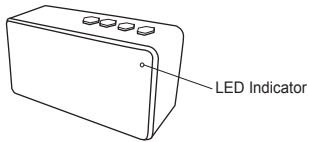

Charging The Speaker

 1. Connect the Micro USB cable to the micro USB charging port on the back of the speaker.
2. Connect the standard USB plug end of the cable to a power USB port on a computer or other USB charging device. The red LED on the speaker will glow while the unit is charging, and will shut off once fully charged.

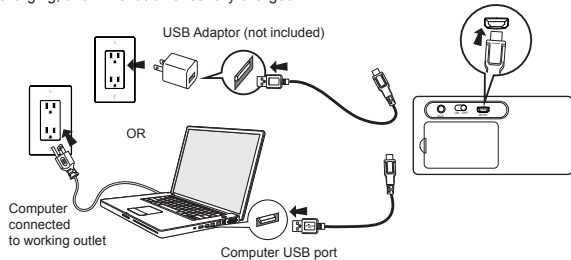

Listening to Music via AUX-In

Connect one end of a standard 3.5mm audio cable to the headphone jack of your device, and the other end to the AUX jack of the speaker. Press the Mode button on the top of the speaker.

Listening to Music Via Bluetooth



1. Make sure your Bluetooth device is fully charged. Turn on your Bluetooth device and make it 'discoverable' by turning on Bluetooth mode (check in Options or Settings).
2. Press the Mode button on the speaker. The blue LED will flash while the speaker attempts to pair with your Bluetooth device. "FR-B19" should appear on your device's Bluetooth screen. If "Not Connected" or a similar message appears on your screen, select "FR-B19" to connect to the speaker.



3. If pairing is successful, the blue LED on the speaker will flash. Press Play on both the speaker and your device to start listening to music.

Using The Speakerphone Via Bluetooth

When you are listening to music via Bluetooth and you receive a call, you can answer the call through the speaker by pressing the Play/Pause/Speakerphone button. The music will be disabled during the call, and will resume once you end the call by pressing the Play/Pause/Speakerphone button again.

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B)/NMB-3(B)

FCC ID: IAJB19

Questions? Visit www.ekids.com
 For any other questions: 1-888-TOP-TOYS Toll Free
 Distributed by ekids
 1299 Main Street Rahway NJ 07065