

Limited 90 Day Warranty

eKids warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by eKids Customer Service. The product must include proof of purchase, including date of purchase. An out-of-warranty fee for service will be charged for units that are received without proof of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Call eKids Customer Service at 1-888-TOP-TOYS for Return Authorization and for the address of the Factory Service Center.
2. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box. eKids is not responsible for damage that occurs during shipping to the Factory Service Center.
3. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period. Also include your name and address information, a brief description for why the unit is being returned, and the return authorization number. No unit can be processed without a return authorization number.
4. Write the return authorization number on the side of the shipping package and send the unit prepaid and insured to the Factory Service Center address authorized by eKids Customer Service.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.


Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids product.

Questions? Visit www.ekids.com
For any other questions: 1-888-TOP-TOYS Toll Free
Distributed by KIDdesigns, Inc. Rahway, NJ 07065-5024
eKids is a wholly owned subsidiary
of KidDesigns, Inc, 1299 Main Street Rahway NJ 07065

888-867-8697


Printed in China

 MF08-082113-A

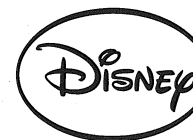

Minnie Mouse

 Model: MF-M
Bluetooth Speake

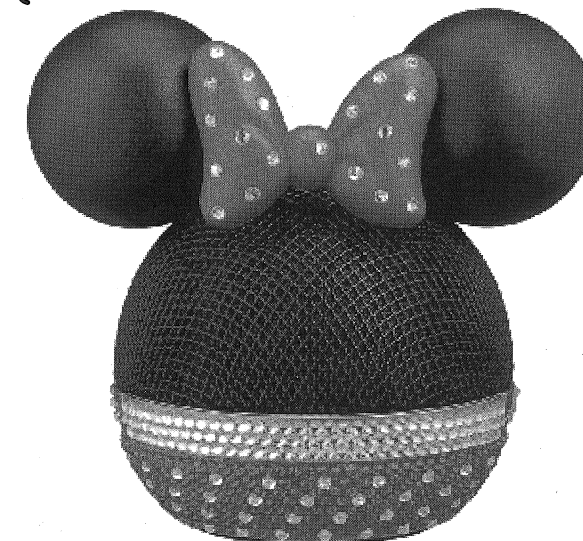

instruction manual

FCC Information

MF-M8

FCC ID: EMOIDM8N1
IC: 986B-MFM8

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada

MF-M8


Table of Contents

Meet Your MF-M8	1-2
Charging the Unit	3
Using Bluetooth:Pairing Your Device	4
Playing Audio Via Bluetooth.....	5
Playing Audio Via Aux.....	6
Internal Rechargeable Lithium-ion Battery.....	7
Consumer Product Safety Guide	8-9
Troubleshooting	10
Warranty.....	11


Meet Your MF-M8

MF-M8

 Left Side

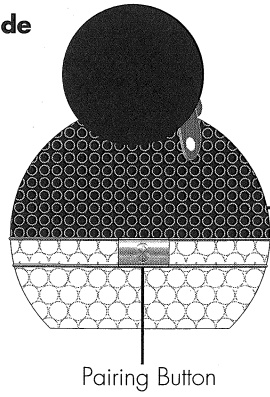


Right Side

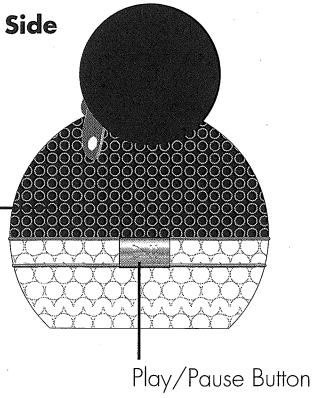 


Power/Charging/Pairing
Indicator Light

 Bottom


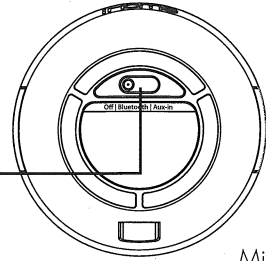


Back

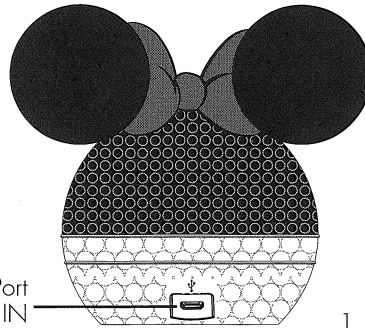 

Included

  - MF-M8 system
- Micro USB to USB/3.5 mm audio cable

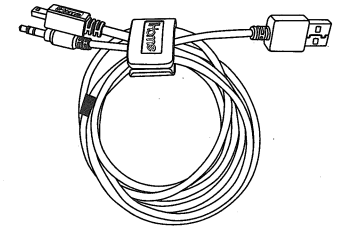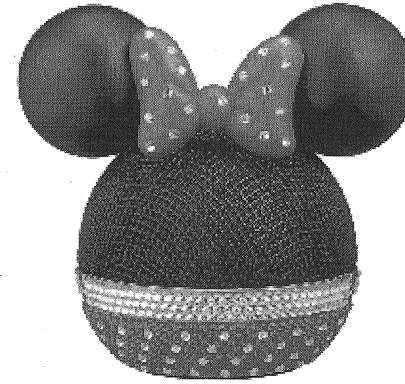


MF-M8

Using the MF-M8

Charging the Unit

 1. Connect the micro USB plug to the micro USB charging port on the back of the unit.
2. Connect the standard USB plug end of the cable to a power USB port on a computer or other USB charging device that is connected to power. For first time use, charge unit for about 8 hours.
3. The amber light appears while the unit is charging and turns off when unit is fully charged. If unit is not powered on when micro USB plug is connected, a solid amber light appears to indicate unit is charging.

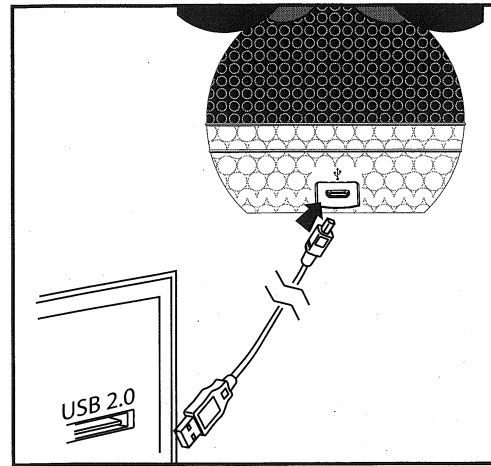



NOTE: When unit is on and not connected to power source, flashing amber light indicates battery needs charging.

3

Using Bluetooth: Pairing Your Device

NOTE: See the MF-M8 Bluetooth Connection Guide for complete pairing details.

  1. Move the **Off/Bluetooth/Aux Switch** to the Bluetooth position (center). The green and amber lights flash on front of the unit and a tone will sound to indicate auto-pairing attempt.
2. Turn on Bluetooth capability on your device and make it discoverable (see your device's instructions to add or setup a Bluetooth device).
3. Press and hold the **Pairing Button** for 2 seconds. A tone will sound and green and amber lights will flash while the unit attempts to pair. "Disney MF-M8" should appear on your device's menu. If "Not Paired", "Not Connected" or similar appears, tap on "Disney MF-M8" to begin pairing. If your device asks for a password, enter **1234** on the keyboard of your device. If no device is paired within 3 minutes, the unit will power off. If this occurs, retry steps 1-3.
4. Once paired with a device, two tones will sound and the green light will glow steadily. There should be an indication on your device that pairing is complete. On some devices, you must then select "Use as Audio Device (stereo)" or similar on the device's Bluetooth menu. Once paired, your device should link to the MF-M8 whenever within range.

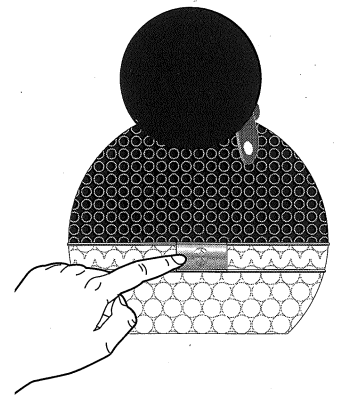



4

Playing Audio Via Bluetooth

1. Move the **Off/Bluetooth/Aux Switch** to the Bluetooth position (center) to listen to audio streamed wirelessly from your paired iPad, iPhone, iPod or other Bluetooth device. The green light will flash slowly as the unit searches for a previously paired device, and then turn green when a previously paired device is detected.
2. Press the **Play/Pause Button** to play or pause audio from your Bluetooth device. **NOTE:** Play/Pause only works in Bluetooth mode. It does not control aux line-in devices.
3. Use the controls on your device to navigate audio tracks and adjust volume.
4. When done listening, move the **Off/Bluetooth/Aux Switch** to the Off position to turn the unit off.

  Using the MF-M8

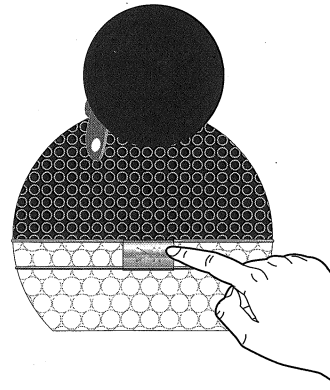


5

Playing Audio via Aux

Using the MF-M8

 1. Connect the micro USB plug to the micro USB charging port on the back of the unit and connect the 3.5 mm audio plug to the headphone or line-out jack on your audio device.
2. Move the **Off/Bluetooth/Aux Switch** to the Aux position (right) to listen to audio via aux in.
3. Power on the audio device and place in play mode.
4. Use the controls on your device to navigate audio tracks and adjust volume.
5. When done listening, move the **Off/Bluetooth/Aux Switch** to the Off position to turn the unit off. Remember to turn off your audio device, too.



6

Internal Rechargeable Lithium-ion Battery

This device uses an internal rechargeable lithium-ion battery that should last the lifetime of the device. If you suspect your battery may be dead, try charging it several times. If the battery does not recharge, please contact us for repair information.

WARNING/DISPOSAL OF UNIT

Please do NOT attempt to change the battery yourself. If the battery has died and you do not want us to replace your battery, you should follow the disposal instructions below:

- Never dispose of used batteries/electronics with ordinary solid wastes, since they contain toxic substances.
- Always dispose of used batteries/electronics in accordance with the prevailing community regulations that apply to the disposal of batteries/electronics. If there are no local regulations concerning battery/electronics disposal, please dispose of the device in a waste bin for electronic devices.
- Many electronics retailers now recycle batteries and other electronic components at no charge. Check to see which ones in your area do so.

CAUTION

The battery used in this device may present a risk of fire, explosion or chemical burn if mistreated

- Never use or charge the battery if it appears to be leaking, discolored, deformed, or in any way abnormal.
- Never disassemble the unit or attempt to remove battery as that could cause leakage of alkaline solution or other electrolytic substance.
- Always confirm that the temperature is 5°C – 35° C (41° - 95° Fahrenheit) before you charge the battery. Leakage or deterioration of the battery may occur if this warning is not heeded.
- Never expose the battery to any liquid.
- Never expose the battery to excessive heat such as direct sunlight or fire. Never use the battery pack in an unventilated vehicle where excessive internal temperatures may be encountered.
- Always keep the battery out of the reach of infants and small children.

Consumer Product Safety Guide

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Power-Cable Protection** – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. **Cleaning** – The unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.
7. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.

8. **Attachments** – Do not use attachments not recommended by the product manufacturer.
9. **Lightning and Power Surge Protection** – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. **Overloading** – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
 - A. the power supply cable or plug has been damaged.
 - B. objects have fallen into or liquid has been spilled into the enclosure.
 - C. the unit has been exposed to rain.
 - D. the unit has been dropped or the enclosure damaged.
 - E. the unit exhibits a marked change in performance or does not operate normally.
12. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
13. **Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

Unit doesn't respond (no power)

- Make sure unit is completely charged. Check that all connections are correct and properly plugged in. Make sure your device is properly paired with the MF-M8.
- Make sure the **Off/Bluetooth/Aux Switch** is not in the Off (left) position.

Resetting the Unit

If the unit does not respond properly or appears to be "frozen", you may wish to try resetting it. To do so, move the **Off/Bluetooth/Aux Switch** to the Bluetooth position (center), then press and hold the **Pairing Button** for about 8 seconds until a long beep sounds. Doing so will restore the unit to default settings. NOTE: After a reset, you will need to re-pair your Bluetooth device(s).

Trouble pairing device/computer with MF-M8

Bluetooth implementation varies depending on your computer's hardware and operating system. Please see our website for updates on pairing.

- Make sure you have the latest firmware for your iPad, iPhone or iPod (update via iTunes if needed).
- Make sure your device is working properly. Check your device's manual for details on Bluetooth pairing and linking.

MF-M8



QUICK BLUETOOTH CONNECTION GUIDE

 
BEFORE YOU START

Your Bluetooth device (cellphone, MP3 player, computer, etc.) must support the **A2DP** Bluetooth profile (commonly known as stereo audio profile) to work with the Disney MF-M8. Many of the latest mobile phones and PCs with built-in Bluetooth functionality will support this profile. For accurate information about your product, please refer to your Bluetooth device's user manual for details on the Bluetooth profiles it supports and on how to set the device's Bluetooth pairing/searching/setup mode.




PAIRING & LINKING YOUR BLUETOOTH DEVICE WITH THE MF-M8


- 1) Make sure your Bluetooth device is fully charged. Turn it on.
- 2) Make sure the **Off/Bluetooth/Aux switch** on the bottom of the MF-M8 is in the Bluetooth (center) position.
- 3) Turn on Bluetooth functionality on your Bluetooth device. Typically, Bluetooth controls are found on the device's tools or settings menu (see your user manual). Turn on Bluetooth connectivity and make your device "discoverable".
- 4) Press and hold the **Pairing Button** located on left side of the MF-M8. A tone will sound and the green and amber lights on the MF-M8 will flash while in pairing mode.
- 5) Choose "add a new Bluetooth device" or "setup Bluetooth device" on your device. It will start to search. "Disney MF-M8" should appear on your device's Bluetooth menu. If "Not Paired", "Not Connected" or similar appears on your device, tap on "Disney MF-M8" to complete pairing. If the pairing attempt fails or times out (after 3 minutes), turn off the MF-M8. Power it on again to Bluetooth mode and start pairing procedure again (see steps 2 - 4).
- 6) After your device and the MF-M8 have discovered each other, a "Pairing Successful" or similar message should appear on your device and the amber light on the MF-M8 should stop flashing and glow steadily for a moment before turning green. If your device prompts you for a pass code, please enter **0000**. On some devices such as computers, once paired you must select the MF-M8 from the Bluetooth menu and choose "Use as Audio Device (stereo)" or similar.
- 7) Pairing remains intact when the MF-M8 and/or the Bluetooth device is powered off or is taken out of link range (30 feet). To re-establish an active connection when your Bluetooth device returns within range, press the **Pairing button**.
- 8) The next time the MF-M8 is powered on it will automatically try to re-establish a link with the most recently linked Bluetooth device. If your device does not support auto-linking OR was not the last linked to the MF-M8, you must re-link manually by selecting MF-M8 from the Bluetooth device's menu on your Bluetooth device or by pressing the **Pairing button** on the MF-M8.

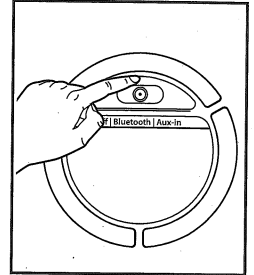

2

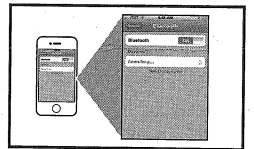 

3

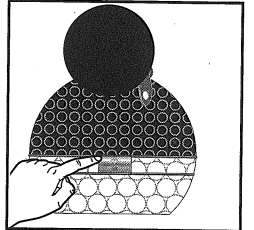 

4