




Model: MH-715
Digital Locker Secret Safe

INSTALLING THE BATTERIES

NOTE: This unit ships with a mechanical locking device. Open the battery compartment door to remove and discard.

ATTENTION: Batteries should only be installed by an adult. To install batteries, follow these instructions:


1. Use a Philips screwdriver to open the battery compartment door.
2. Install 3 "AAA" size new batteries into the compartment, making sure that the + and - polarities match the diagram printed inside.
3. Close the battery compartment door and tighten the battery door screw. Don't over tighten.

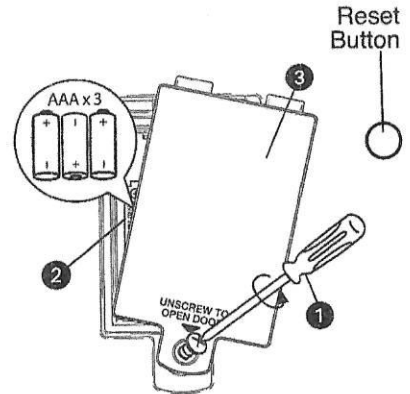

SETTING YOUR SECRET CODE

STOP! READ BEFORE CLOSING THE DOOR

1. When you install batteries, the code to open the door is 1, 2, 3 + Enter.
2. To program your own 3 digit code, press and hold the Reset Button (located next to the battery compartment) for 1 second.

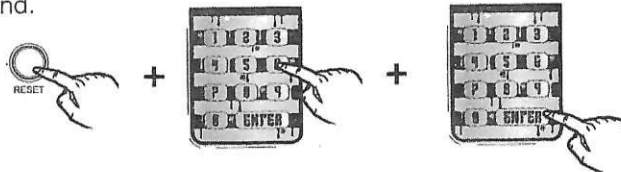

3. Next, enter your secret code. The secret code must be three numbers, and you must press 'Enter' to save the new code.
4. When you enter the correct code, the LED above the keypad will turn green and the lock will release. If you enter an incorrect code, the LED will turn red and the door will remain locked.

MANUAL LOCK RELEASE

If you forget your secret code, or if the batteries expire while the door is locked, you can manually unlock the door. To do so, insert the extended tip of a paper clip or other small tool into the small lock release hole on the left side of the locker.

