

## About Your Toy

Store all your favorite jewelry in this adorable music box made just for little girls! Watch Minnie dance along to the built-in music, or connect your MP3 player to hear tunes from your own collection.

## Installing/Replacing the Batteries


This unit comes with 3 AA batteries already installed. These are for in-store demonstration purposes only and should be replaced when you get the toy home. If the sound becomes weak, distorted or the unit does not function properly, the batteries should be replaced.

1. Using a Phillips screwdriver, open the battery compartment door located on the bottom of the unit.
2. Insert 3 new AA (R6) batteries in the battery compartment. Make sure batteries match the + and - as indicated in the battery compartment diagram.
3. Replace battery compartment door. Do not overtighten screw.

**WARNING : DO NOT THROW BATTERIES AWAY WITH HOUSEHOLD TRASH. PLEASE CONSULT LOCAL REGULATIONS FOR PROPER BATTERY DISPOSAL.**


## For the Best Possible Performance

- We recommend the use of alkaline batteries for longer life.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Batteries are to be inserted with correct polarity.
- Remove exhausted batteries from the unit.
- Do not attempt to recharge non-rechargeable batteries.
- The supply terminals are not to be short-circuited.
- Batteries should be removed if the item will not be used for an extended period of time, such as a month or longer, to prevent battery leakage or damage.
- Rechargeable batteries should only be charged under adult supervision.
- Only batteries of the same or equivalent type recommended are to be used.

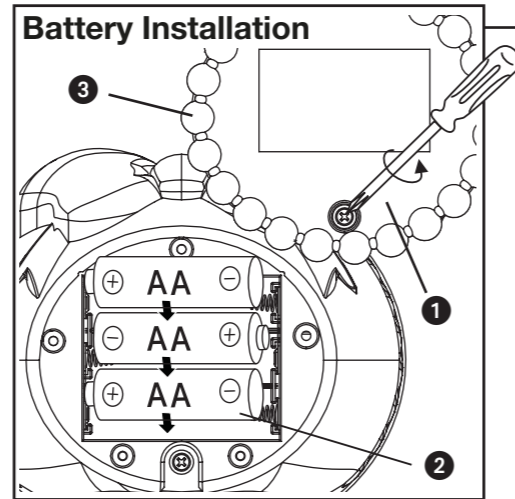

AUX Line-in Cable

Back View

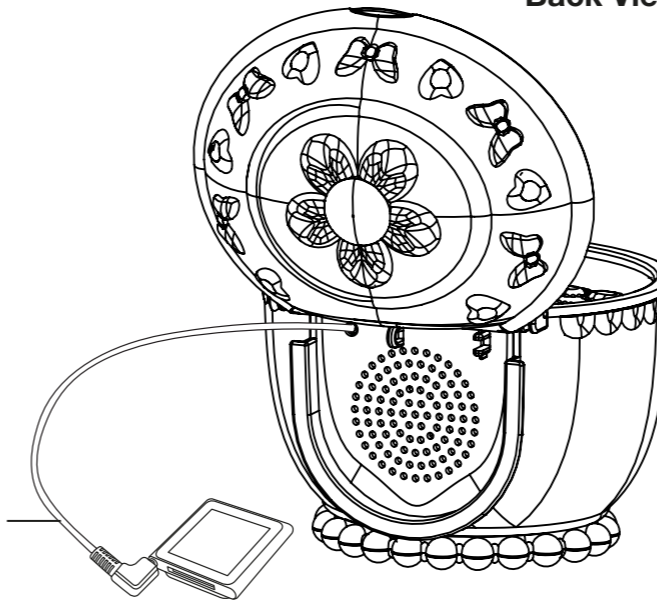

### Power & Demo Switch

Slide switch to turn unit to Demo/Off/On.

### MP3 Button

Press to hear music playing from a connected MP3 player or other audio device.

### Song Button


Press to hear a built-in song!



## Power & Demo Switch


Slide the **Power & Demo Switch** to turn the unit to demo, off or on. To save battery life, the unit will power off after a brief time if no button is pressed.


## Listening to a Song

There is a fun built-in Minnie Mouse song to dance along with! Press the  **Song Button** to hear it.

## Playing Your MP3 Music (MP3 Mode)

Sing along to your own music from an MP3 player, CD player, etc by using the MP3 Mode.

1. Find the MP3 Line-In Cord located on the back of the unit.
2. Connect the MP3 Line-In Cord to your audio device's headphone or line-out jack.
3. Press the  **MP3 Button** inside the jewelry box and then press the Play Button on your audio device.
4. Adjust the Volume on your audio device to your desired level.

Please keep in mind that the jewelry box will automatically turn off in 7.5 minutes to save power. To re-engage MP3 Mode once the power turns off, press the  **MP3 Button** again .

## Maintenance

It is important to keep the unit as dry and clean as possible. You may clean the cabinet with a cloth or sponge moistened with mild soap and water. Do not attempt to use strong cleansers or solvents, as they may cause damage.

MODEL: MM-122  
INSTRUCTION MANUAL  
SIZE: 357W x 201Hmm  
DATE: Jul 2, 2013  
MATERIAL: 100gsm White paper  
PRINTING PURPLE (PMS 265C), 1C+1C

