


## Using Your Ear Protector

Use the Ear Protector to reduce loud noises from concerts, fireworks, and more.

## Detachable Audio Cord

To use as headphones, connect one end of the included audio cord to the AUX-in jack located on the side of the earcup. Connect the other end of the cord to the headphone jack of your audio device.

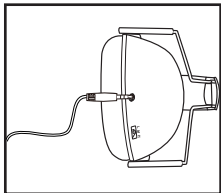

To protect your hearing, always start listening with the Volume Control of your music player or game player set to a low level and gradually increase the volume to a comfortable listening level.


**IMPORTANT!** Listening at high volume for long periods of time can result in long-term hearing damage. For your safety, do not use headphones if they would prevent you from hearing warning sounds, such as while riding a bike, etc.

## Adjustable Volume Limiter

This model comes equipped with an adjustable volume limiter to provide a safe and optimal listening experience for iOS and/or Android users. View the chart to find the appropriate volume level for your device.

Volume Level	iOS Devices	Android Devices
High	Not Recommended	Not Recommended
Medium	Acceptable	Recommended
Low	Recommended	Recommended

The volume switch is located on the inside of the left ear cup. Before use, have an adult slide the switch to set the headphone volume to High, Medium or Low.

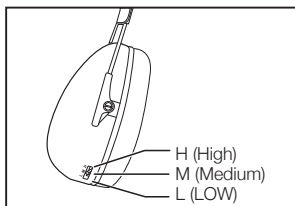

## Limited One-Year Warranty

eKids warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service. If service is required, please call Customer Service at 1-888-TOP-TOYS to obtain a Return Authorization Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

### Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner. This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids product.

Distributed by eKids, LLC

For questions or comments please call our toll-free number: **1-888-TOP-TOYS**

Also visit our website: **www.ekids.com**

1299 Main Street Rahway, NJ 07065