

Consultación de problemas

Si la Boombox experimenta un sonido distorsionado o un borroneo, compruebe las pilas. Probablemente se están agotando o deba sustituirse con 3 nuevas baterías AA. Si el problema no trabaja aun después de cambiar las baterías, netéjelas y asegúrese de haberlas instalado correctamente. Recomendamos pilas alcalinas. Cuando se conectan las baterías al equipo de sonido, se interrumpe, use el cable extendido de un CD de papel para conectar el cable de audio al botón de Reinicio situado en la parte posterior de la unidad.

Si los problemas persisten, NO INTENTE REPARAR EL JUGUETE USTED MISMO. Consulte la garantía para ver la información relacionada con el servicio de la fábrica.

Información de la FCC

Este dispositivo cumple con la Parte 15 de las reglas de la FCC. La operación está sujeta a las dos condiciones siguientes: (1) este dispositivo no puede causar interferencia perjudicial, y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluyendo interferencia que pueda causar un funcionamiento no deseado.

Nota: Este equipo se ha probado y se ha encontrado que cumple con los límites para un dispositivo digital de la clase B, de acuerdo con la Parte 15 de las reglas de la FCC. Estos límites se diseñan para proporcionar una protección razonable contra la interferencia producida en una instalación residencial. Este equipo emite, usa o puede irradiar energía de radiofrecuencia, y si no se instala o utiliza de acuerdo con las instrucciones, puede causar interferencia perjudicial a las comunicaciones por radio. Sin embargo, no hay garantía de que este equipo no cause interferencia perjudicial en una instalación que este equipo cause interferencia perjudicial a la recepción de información por radio. El usuario puede desactivar o apagar el equipo, se alerta al usuario a intentar conectar el equipo al equipo (por ejemplo) y el receptor. Recomente o vea en un tomo la antena de recepción. Aumentar la separación entre el equipo y el receptor. Conecte el equipo en una toma de corriente de un circuito diferente al circuito donde está conectado el receptor. Solicite ayuda si distribuye o si un técnico recibe energía de radio (FR).

Nota: Los cambios o las modificaciones a esta unidad no aprobadas expresamente por la parte responsable del cumplimiento pueden anular la autoridad del usuario para operar el equipo.

Mantenimiento

Es importante mantener el radio cassette para cantar en el mejor estado posible. Puede limpiar la carcasa con un paño o esponja húmeda con jabón suave y agua. No use un líquido abrasivo ni limpiador o disolventes fuertes, ya que pueden causar daños.

Preguntas o Comentarios

Para preguntas o comentarios relacionados con éste u otros productos de diseño KID, llame a nuestro número gratuito 1-888-TOYS-10. Visite nuestro sitio web: www.kiddesigns.com. Si los problemas persisten, no intente reparar la unidad; consulte la garantía para el servicio de fábrica.

Un año de garantía limitada

KIDDesigns garantiza que este producto está libre de defectos en materiales y mano de obra, bajo condiciones y uso normales, durante un período de un (1) año contado a partir de la fecha de compra original. En caso de que este producto no funcione de manera satisfactoria, es mejor volverlo a la tienda en la que se compró originalmente. En el caso de que esto no resuelva el problema y sea necesario reemplazar a causa de un defecto de fabricación durante el período de la garantía, KIDDesigns reparará o sustituirá a su discreción, este producto con un modelo nuevo. Este servicio está sujeto a verificación del defecto o mal funcionamiento una vez recibida esta producto por el Centro de Servicio de fábrica autorizado por el Servicio al Cliente.

En caso de que todavía requiera mantenimiento, rogamos llamar al Servicio al Cliente al número 1-888-TOYS-10 (1-888-867-8697) para obtener el Número de Autorización de Devolución y las instrucciones de envío.

Exclusión de Responsabilidad: NOTA: Esta garantía sólo es válida si el producto se utiliza para el fin en el que fue diseñado. No cubre (i) productos que hayan sufrido daños por negligencia o uso indebido, uso indebido o modificaciones no autorizadas, (ii) carcasas agrietadas o rotas, o unidades dañadas por un accidente, (iii) modificaciones de medio de transporte, (iv) modificaciones de medio de transporte, o (v) productos que no estén producidos por el Centro de Servicio de Fábrica y su devolución a su cargo al propietario.

Esta garantía sólo es válida en los Estados Unidos de América y no se extiende fuera del territorio de fabricación original. En ningún caso será responsable KIDDesigns ni ninguno de sus afiliados, distribuidores o representantes. KIDDesigns, sus afiliados, distribuidores, miembros o agentes, ante usted o ninguna tercera parte de ningún tipo, no garantiza ni acepta ninguna responsabilidad por daños, lesiones, gastos o pérdidas. Algunos estados no permiten las limitaciones de responsabilidad por daños, lesiones o pérdidas. Algunos estados que estas restricciones no se aplican. Esta garantía le otorga ciertos derechos adicionales y puede tener otros derechos que varían según el estado.

Esta garantía no es un acuerdo en absoluto total y complementa, pero no reemplaza, la exclusión de responsabilidad por contencioso contractual que usted encuentra dentro de los términos de compra o tarjeta de crédito para la compra de su producto KIDDesigns.

© 2014 KIDDesigns, Inc. Reservados todos los derechos. Todos los derechos reservados. KIDDesigns, Inc. 1299 Main Street, Fairfax, VA 22036. eKids es una subsidiaria en propiedad absoluta de KIDDesigns, Inc.

Kréditos de las canciones

Anything
Letra y música de John Kavanaugh & Craig Geber
© 2013 Walt Disney Music Company (ASCAP)
Interpretado por Sofia The First Cortesía de Walt Disney Records
The Slayers
Letra y música de John Kavanaugh & Craig Geber
© 2013 Walt Disney Music Company (ASCAP)
Wondeland Music Company, Inc. (BMI)
Todos los derechos reservados.
Interpretado por Sofia The First Cortesía de Walt Disney Records
True Slayers
Letra y música de John Kavanaugh & Craig Geber
© 2013 Walt Disney Music Company (ASCAP)
Wondeland Music Company, Inc. (BMI)
Todos los derechos reservados.
Interpretado por Sofia The First Cortesía de Walt Disney Records
Impreso en China

Installation des piles

1. Utilisez un tournevis Phillips pour ouvrir le compartiment des piles situé à l'arrière de l'appareil.
2. Insérez 3 piles AA (RG) en respectant la polarité (+ et -) indiquée sur le diagramme à l'intérieur du compartiment.
3. Refermez le compartiment et serrez les vis. Ne serrez pas trop.

Pour évaluer une meilleure performance

• N'utilisez que des piles recommandées/fournies ou de type équivalent.
• Utilisez des piles alcalines pour une durée plus longue.
• Ne mélangez pas des piles neuves et usagées, des piles alcalines, carbone-zinc et nickel-cadmium rechargeables.
• Ne laissez pas les piles en respectant les polarités (+/-) indiquées sur les piles.
• Évitez les piles usées de l'appareil.
• Les piles plus anciennes doivent être rechargées sous la supervision d'un adulte.
• Ne tenez pas de recharger des piles non rechargeables.
• Ne posez pas les piles orientées vers le soleil dans des températures ambiantes normales.
• Pour éviter toute fuite ou dommage de pile, évitez les piles d'un produit à celui-ci. Ne laissez une pile utilisée pendant un mois ou plus.
• Utilisez une extrême prudence lors de la manipulation de piles qui fuient (éviter le contact direct avec les yeux et le visage). En cas de contact du liquide d'une pile avec les yeux, nettoyez immédiatement les yeux à grande eau tiède et les laisser en contact avec l'eau pendant au moins 30 minutes. Consultez immédiatement un médecin si les symptômes persistent.
• Ne jetez pas les piles usées dans les ordures ménagères ou dans un feu.
• Évitez les piles non recommandées et les réglementations locales sur le sujet.

Retrait de la Langue/Démo

Retrait de la Langue/Démo: L'appareil est doté d'une fonction "Essai-à-tour". Avant de l'utiliser, tracez sur la languette Démo située à l'arrière de l'appareil et jetez-la.

Utilisation du microphone

Tirez le micro vers le HAUT pour le libérer du plateau sur le côté de l'appareil. Pour remettre le micro, placez-le de sorte à faire les gros orifices vers le haut et vérifiez que la languette sur le micro pour le sécuriser.

Tenez-vous prêt à chanter! Appuyez sur le bouton situé sur le microphone lorsque vous chantez ou parlez. Laissez le bouton pour ce que le son du micro.

CD ou DVD: Pour éviter les rebonds (grésillements ou bruits inconnus), ne dirigez pas le micro vers le haut-parleur.

Mettre en Marche/Arrêter

1. Lorsque l'appareil est arrêté, appuyez sur la touche **Power On/Off** pour mettre l'appareil en marche.
2. Vous pouvez éteindre l'appareil à tout moment en appuyant sur la touche **Power On/Off**.

Choix de la langue

Utilisez le bouton Anglais/Français situé derrière l'appareil pour sélectionner la langue de votre choix.

Lecture d'une chanson

1. Vous pouvez sélectionner une chanson préenregistrée à l'aide des boutons de sélection situés sur le panneau avant de l'appareil. 2. Appuyez sur la touche **Play / Repeat** pour jouer la chanson sélectionnée.
3. Utilisez le Microphone pour chanter avec la chanson (appuyez sur la touche **Micro** pour activer le microphone).
4. Pour répéter la même chanson une fois que'elle terminée à l'aide de la touche **Play / Repeat**.
5. Répétez l'opération.

Réglage du volume

Pour régler le volume, touchez le bouton volume situé sur le côté de l'appareil. Le volume du micro est réglé sur le niveau par défaut.

Utilisation du câble d'entrée de la ligne AUX

Utilisez le câble auxiliaire de haut niveau inclus pour connecter au baladeur un appareil audio tel qu'un smartphone, lecteur MP3, lecteur CD ou autre appareil connecté.
1. Connectez le câble d'entrée de la ligne AUX à la ligne radio-cassette à la ligne de sortie ou sur la prise de casque de votre appareil audio. Appuyez sur la touche **MP3 Mode**.
2. Allumez votre appareil audio et mettez-le en mode de lecture.
3. Appuyez sur la touche **MIC** pour chanter la chanson en cours à partir de votre appareil MP3 ou tout autre appareil connecté.
4. Le mode MP3/Aux s'éteint automatiquement environ 15 minutes plus tard pour économiser l'énergie.
5. Appuyez sur la touche **MP3 Mode** pour activer de nouveau le mode.

Using the Microphone

1. Pull UP on the mic to release it from the post on the side of the unit. To return the mic, position it with the large hole over the post, then press downwards on the mic to secure it.

2. Press the microphone play/stop/sleep button on the microphone while singing or speaking. Release button to mute microphone.

TIP: To avoid feedback (unpleasant screeching or howling sound), do not point the mic towards the speaker.

Power On/Power Off

1. When this unit is off, press the **Power On/Off** Button to turn the unit on.

2. You can turn off the unit at any time by pressing the **Power On/Off** Button.

Changing the Language

Use the English/French Switch located on the back of the unit to select your preferred language.

Playing a Song

1. You can select the pre-recorded song you want to sing along by pressing the **Song Select** Button to cycle to the desired song.

2. Press the **Play/Repeat** Button to play the last selected pre-recorded song again.

Volume Adjust

Move the Volume Knob to the side of the unit to adjust the song volume. The mic volume is preset and does not adjust.

Using the AUX Line-In Cable

Use the included AUX Line-In Cable to connect an audio device such as a smartphone, MP3 player, CD player, etc., to the Boombox to play songs. To use, follow these steps:
1. Connect the AUX Line-In Cable on the Boom Box to the line in or headphone jack of your audio device.
2. Turn on your audio device and put it in play mode.
3. Press the **MIC** Button to sing along to the song played from your MP3 player or other connected device.
4. MP3/Aux mode will automatically turn off in about 15 minutes to save power.

5. Press the **MP3 Mode** Button to activate the audio again.

Dépannage

• Vérifiez les piles si le son du baladeur est déformé ou inégalement. Elles sont probablement fatiguées et devraient être remplacées. Vérifiez que le câble de la ligne AUX est inséré dans le bon endroit et que la languette sur le micro pour le sécuriser est correctement. Des piles alcalines sont fortement recommandées.
• En cas de problème de fonctionnement, utilisez un tournevis pour ouvrir le couvercle de l'appareil pour vérifier le bouton de réinitialisation situé à l'arrière de l'unité.

Si les problèmes persistent, n'essayez pas de réparer l'appareil, regarde la garantie pour voir les conditions de réparation en usine.

Information FCC

Ce dispositif est conforme à la partie 15 des réglementations du FCC. L'opération est soumise aux deux conditions suivantes: (1) il doit pas causer des interférences nocives, et (2) il doit pas être susceptible de recevoir des interférences nocives, incluant des interférences des autres équipements électroniques.

REMARQUE: Cet équipement a été testé et se conforme aux limites pour un appareil domestique de la partie 15 des réglementations du FCC. Ces limites sont destinées pour un environnement résidentiel. Elles ne tiennent pas compte des interférences nocives et de la sensibilité de ce produit.

REMARQUE: Cet équipement a été testé et se conforme aux limites pour un appareil domestique de la partie 15 des réglementations du FCC. Ces limites sont destinées pour un environnement résidentiel. Elles ne tiennent pas compte des interférences nocives et de la sensibilité de ce produit. Utilisez une extrême prudence lors de la manipulation de piles qui fuient (éviter le contact direct avec les yeux et le visage). En cas de contact du liquide d'une pile avec les yeux, nettoyez immédiatement les yeux à grande eau tiède et les laisser en contact avec l'eau pendant au moins 30 minutes. Consultez immédiatement un médecin si les symptômes persistent. Ne jetez pas les piles usées dans les ordures ménagères ou dans un feu. Évitez les piles non recommandées et les réglementations locales sur le sujet.

Entretien

Il faut éviter l'appareil ne soit en contact avec l'eau et les saillies. Vous pouvez nettoyer l'extérieur avec un chiffon doux et une solution humide. Évitez d'appliquer de l'eau. N'utilisez pas d'utilisier de nettoyage qui contiennent plus d'un fort car ils peuvent endommager l'unité.

Questions ou commentaires

Si si us des questions ou des commentaires concernant ce produit ou d'autres produits KID, appelez le numéro 1-888-TOYS-10. Visitez notre site web: www.kiddesigns.com. Si des problèmes persistent, n'essayez pas de réparer l'appareil, regarde la garantie pour voir les conditions de réparation en usine.

AvERTISSEMENT: Tout changement ou modification après le départ de la ligne de fabrication peut rendre l'unité responsable pour la conformité peut annuler le droit de retour de l'équipement. KIDDesigns, Inc. 1299 Main Street, Fairfax, VA 22036. CAN ICES-3 (B)NMB-3(B)

WarnIng: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the warranty and may affect the equipment.
CAN ICES-3 (B)NMB-3(B)

Troubleshooting

If the Boombox is experiencing distorted or fuzzy sound, check the batteries. They are most likely weak and need to be replaced with 3 new alkaline batteries. If the sound does not work after changing the batteries, then take the Boombox to a store where they have installed them properly. We recommend alkaline batteries.
• In the event of interrupted operation, use the extended view of a poster or other thin book to press in the Reset button located on the back of the unit. If this equipment does cause harmful interference to a radio or television receiver, you should turn the receiver off or the power to the receiver off at the discretion of the user.

THE UNIT. Use warranty for factory services.

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesirable operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential environment. The equipment uses radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to a radio or television receiver. It is important that you understand that this interference will not occur in a particular installation. If this equipment does cause harmful interference to a radio or television receiver, you should turn the receiver off or the power to the receiver off at the discretion of the user.

Disclaimer of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.

1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or (ii) the manufacturer shall not be liable for any such third party claims, or (iii) the manufacturer shall not be liable for any such third party claims, or (iv) the cost of shipping this product to the Factory Service Center and the cost of shipping the product back to the user shall be the responsibility of the user.
1-888-TOYS-10 (1-888-867-8697) to return a Return Authorization Number (RAN) to your retailer, or contact your retailer's service center.
Disclaimers of Warranty: NOTICE: This warranty is void only if the product is used for the purpose for which it was designed. If the product is used for any other purpose than for which it was designed, or if the product is damaged by negligence or willful acts, misuse or accident, or if the product is used for any purpose other than for which it was designed, or if the product is damaged by crushing or broken batteries, or if any damage by excessive heat (i) the manufacturer shall not be liable for any such third party claims, or