

Troubleshooting

- If the Boombox is experiencing distorted or fuzzy sound, check the batteries. They are most likely weak and need to be replaced with 3 brand new "AA" batteries. If the unit still does not work after changing the batteries, then take them out and make sure you have installed them properly. We recommend alkaline batteries.
- In the event of interrupted operation, use the extended wire of a paperclip or other thin tool to press in the Reset button located on the back of the unit.
- If the trouble persists, **DO NOT ATTEMPT TO REPAIR THE UNIT. See warranty for factory services.**

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B)/NMB-3(B)

Maintenance

It is important to keep the unit as dry and clean as possible. You may clean the cabinet with a cloth or sponge moistened with mild soap and water. Do not attempt to use strong cleansers or solvents, as they may cause damage.

Questions or Comments

For questions or comments regarding this or other eKids products, please call our toll-free number: **1-888-TOP-TOYS**. Also visit our website: www.eKids.com

If problems persist, please do not attempt to repair unit; see warranty for factory service.

Limited One Year Warranty

eKids, LLC warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please call Customer Service at 1-888-TOP-TOYS to obtain a Return Authorization Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids product.

Questions? Visit www.eKids.com

For any other questions: 1-888-TOP-TOYS Toll Free
1299 Main Street Rahway NJ 07065

© 2018 Viacom International Inc. All Rights Reserved.

Nickelodeon, Sunny Day and all related titles, logos and characters are trademarks of Viacom International Inc.

nickelodeon
Sunny Day™

Model: SY-115

SING-ALONG BOOMBOX



Important Message to Consumers

Thank you for purchasing one of our top-quality electronic products. Please take a moment to read through these instructions to help you understand the safe and proper way to use this toy to extend its usability.

Keep these instructions for future reference as they contain important information.

Installing the Batteries

- 1 Using a Phillips screwdriver, open the battery compartment door located on the back of the unit.
- 2 Insert 3 new AA (R6) batteries in the battery compartment. Make sure batteries match the + and - as indicated in the battery compartment diagram.
- 3 Replace battery compartment door. Do not overtighten screw.

Battery Use Cautions and Tips for Safety & Best Performance

- Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from product.
- Recharge rechargeable batteries under adult supervision.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Do not dispose of batteries in the household trash or fire.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.

Demo/Play Switch

The Boombox is shipped in Demo mode for in-store demonstration purposes only. Slide the Demo/Play Switch to Play Mode when you are ready to sing!


Song Credits

SUNNY DAY THEME

By Joleen Belle, Joachim Svare, and Michelle Buzz

© 2016 Music by Nickelodeon Inc. and Tunes by Nickelodeon Inc.
All publishing rights administered by Sony/ATV Music Publishing LLC
(P) 2016 Viacom International Inc.

All Rights Reserved. Used by Permission.

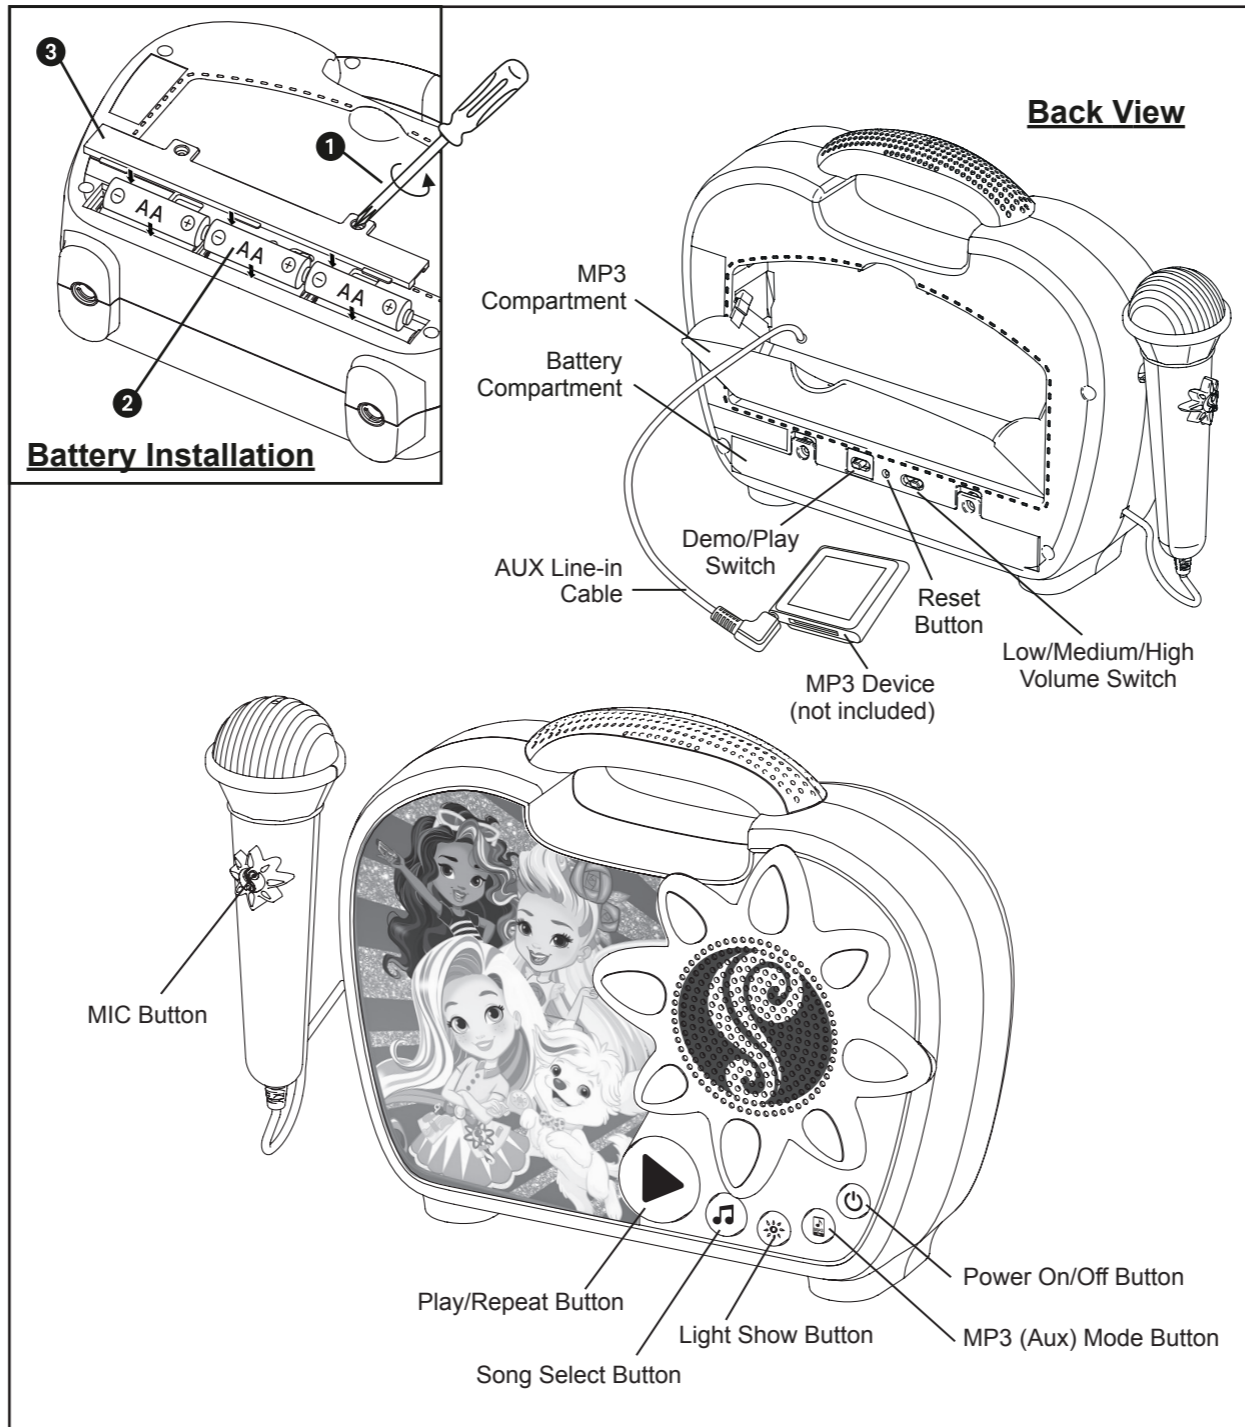

Using the Microphone

Pull UP on the mic to release it from the post on the side of the unit. To return the mic, position it with the large hole over the post, then press downwards on the mic to secure it.

Be relaxed and ready to sing! Press the button on the microphone while singing or speaking. Release button to mute microphone.

TIP: To avoid feedback (unpleasant squealing or howling sound), do not point the mic towards the speaker.

Power On/Power Off

1. When the unit is off, press the **Power On/Off Button** to turn the unit on.
2. You can turn off the unit at any time by pressing the **Power On/Off Button**.

Playing a Song

1. You can select the pre-recorded song you want to sing along to by pressing the **Song Select Button** to cycle to the desired song.
2. Use the Microphone to sing along (press and hold the **MIC Button** while you sing).
3. To repeat the song once it finishes playing, just press the **Play/Repeat Button**.

Light Show Button

Press the Light Show Button at any time to activate the flashing lights!

Volume Switch

Move the **Volume Switch** on the back of the unit to Low, Medium or High to adjust the song volume. The mic volume is preset and does not adjust.

Using the AUX Line-in Cable

Use the included AUX Line-in Cable to connect an audio device such as a smartphone, MP3 player, CD player, etc., to the Boombox.

1. Connect the AUX Line-in Cable on the Boombox to the line out or headphone jack of your audio device. Press the **MP3 Mode Button**.
2. Turn on your audio device and put it in play mode.
3. Press the **MIC Button** to sing along to the song played from your MP3 player or other connected device.
4. MP3/Aux mode will automatically turn off in about 5 minutes to save power.
5. Press the **MP3 Mode Button** to activate the mode again.