


Installing the Batteries

ATTENTION: Batteries should only be installed by an adult. The unit comes with batteries already installed. These batteries are meant for in-store demonstration use only, and should be replaced with fresh batteries. To replace the batteries at home:

1. Use a Phillips screwdriver to open the battery compartment door.
2. Install 3 "AAA" size batteries into the compartment, making sure that the + and - polarities match the diagram printed inside.
3. Close the battery compartment door and tighten the battery door screw. Don't over tighten.

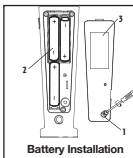

For the Best Possible Performance

- Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries.
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from product.
- Recharge rechargeable batteries under adult supervision.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Do not dispose of batteries in the household trash or fire.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.
- Batteries must be disposed of separately at your local waste recycling center. Do not dispose of them in your household waste bin.

Remove Demo Tab

- The unit is equipped with a Try Me feature. Before using the unit, pull out the plastic Demo Tab located on back panel.

Troubleshooting

In the event of interrupted operation, use the extended wire of a paperclip or other thin tool to press in the Reset button located on the back of the unit.

Maintenance

It is important to keep the unit as dry and clean as possible. Clean the unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner or similar materials are not recommended, as they may damage the surface of the case.

Do not allow dirt, sand, small particles, water or other liquids to enter the toy's casing.

If the unit is to be left unused for an extended time period, such as a month or longer, have an adult remove the battery to extend its life and to prevent leaking or corrosion.

Questions or Comments

For questions or comments regarding this or other eKids, LLC products, please call our toll-free number: 1-888-TOP-TOYS. Please also visit our website: www.ekids.com

Limited One-Year Warranty

eKids, LLC warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please call Customer Service at 1-888-TOP-TOYS to obtain a Return Authorization Number and shipping instructions. A copy of the sales receipt is required to validate in-warranty coverage.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids product.

© 2016 eKids, LLC

Questions? Visit www.ekids.com

For any other questions: 1-888-TOP-TOYS Toll Free

1299 Main Street Rahway NJ 07065

DreamWorks Trolls © 2016 DreamWorks Animation LLC.

All Rights Reserved.

DREAMWORKS
Trolls

MODEL TR-077



SELFIE STAR VIDEO MICROPHONE

Important Message to Customers

Thank you for purchasing one of our many top-quality electronic products. Please take a moment to read through these instructions to help you understand the safe and proper way to use this toy to extend its usability.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B)/NMB-3(B)

Playing with the Microphone

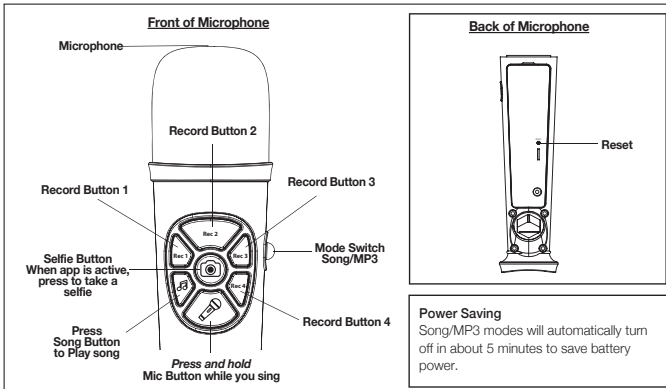

Record your voice as you sing along to the built-in song, or to any song on your audio device by connecting it to the microphone via the built-in AUX cable. Each **Record Button** holds up to 3 minutes 45 seconds of audio. Have a great show!

Song Mode

- Slide the **Mode Switch** located on the side of the microphone to the **Song** position to enable song mode. Press the **Song Button** to turn on the microphone. Lights will flash and after a quick introduction, the microphone will automatically start playing the built-in song.
- Press and hold the **Mic Button** to sing along to the song.
- Press the **Song Button** again to turn off the microphone.

Recording Your Voice

- Press and hold any **Record Button (Rec 1, Rec 2, Rec 3 or Rec 4)** until it starts to blink, indicating recording mode.
- Once recording begins, press the **Song Button** to start the built-in music, and then hold the **MIC Button** to sing and record your voice over the music. Press and release the blinking **Record Button** to stop and save recording.

MP3 Mode

- Slide the **Mode Switch** to the **MP3** position to enable MP3 mode.
- Connect the built-in AUX cable to the headphone or line out jack on your audio device. Turn on and play your audio device.
- Press the **Song Button** to turn on the microphone and hear the music on your audio device.
- Press the **Song Button** again to start playing the built-in song.
- Press and hold the **Mic Button** to sing along with your MP3 player/audio device.

Recording From Your Music Device

- With your audio device connected to the microphone, choose a song that you would like to record. After you have selected a song, use the **Play/Pause Button** on your audio device to pause the song.
- Press and hold the desired **Record Button** until it starts to blink, indicating record mode. Press the **Play/Pause Button** again on your device to start the music and record the song from your device. Press and release the blinking **Record Button** to stop recording. The light will turn solid, indicating a saved recording.

Listening to Your Recordings

- Any Recording Button that is lit solid (not blinking) already has a saved recording on it.
- To listen to your recording, press and release the desired **Record Button**.

Erasing Your Recordings

- To erase a recording, press and hold the desired **Record Button** for 5 seconds.

Using the Selfie Stick

The included selfie stick has a built-in AUX cable and is great for taking still pictures or making music videos of you and your friends. With the free Selfie Star Studio App (available on the Apple App Store, for iPhones ONLY), you can add stickers, troll hair and even create fun postcards.

Attaching the Selfie Stick

- Gently line up the built-in AUX cable on the end of the **Selfie Stick** with the threaded post at the base of the Microphone. Turn the nut to the right to attach. **DO NOT OVER TIGHTEN**

Extending the Selfie Stick

- Turn the **Selfie Stick Extension Nut** right to loosen. Gently pull out the extension rod on the Selfie Stick to extend to the desired length. Turn extension nut left to tighten. **DO NOT OVER TIGHTEN**.

Adjusting the Selfie Stick Camera Holder

- Pull UP on the adjustment tab on top of the camera holder until camera fits, then gently release.

Connecting AUX Cable

- Insert the AUX plug at the end of the coiled cable into the headphone jack on your iPhone. This will allow you to record music onto the microphone and use the selfie functions.

CAUTIONS

- Make sure camera holder fits firmly around iPhone.
- DO NOT** wave selfie stick around or otherwise tempt gravity when iPhone is inserted in camera holder.
- Please be aware of your surroundings and note that some public places may have rules regarding the use of selfie sticks.

Using the App

Download the **FREE Selfie Star Studio App** from the **Apple App Store**. The app is for **iPhone only (Android devices are not supported at this time)** and requires **iOS 9**.

- Before using the app, slide the microphone switch to **MP3 mode** and make sure to store recordings in **Record Buttons 1-4** on the microphone.
- Once you install and open the app, the home screen will provide 3 fun options to choose from:
 - Video** - Use the camera button on the microphone to record your own music video or lip-sync video, then add fun animations in the background!
 - Selfie** - Take a selfie and decorate it with stickers, troll hair and more!
 - Photo Booth** - Create a collage of four photos and then decorate them all!

